

PowerDIN 4PZ

MANUAL

18.11.2020

Table of Contents

Introduction.....	4
1 Safety notices	4
2 General characteristics	5
3 Specifications.....	6
3.1 Features	7
3.2 Drawings	9
3.3 Device description	10
3.4 LED and button functions.....	11
LED indicators	11
SETUP button (under the top plate)	11
3.5 Minimum system requirements (for configuration)	11
3.6 Package contents	12
4 Configuration and control	12
4.1 Connecting PowerDIN 4PZ to LAN	12
4.2 Connecting PowerPDU 4PZ to a local WiFi (AP Mode)	13
4.3 NFC installation in 60 seconds	16
4.3.1 NETIO Mobile2 for Android.....	16
4.4 Detecting and configuring the IP address.....	16
4.5 Login to device web	18
4.6 Restoring factory defaults.....	19
4.7 Controlling the output manually	19
5 Web interface	20
5.1 Outputs	20
5.1.1 Outputs - Energy measurements.....	21
5.1.2 Outputs - General	23
5.1.3 Outputs - Schedule	24
5.2 Inputs.....	25
5.2.1 Digital Inputs - Status and SO Counters	25
5.2.2 Inputs - General	26
5.3 M2M API Protocols.....	27
5.3.1 M2M API Protocol - XML (REST M2M API).....	28
5.3.2 M2M API Protocol - JSON (REST M2M API)	33
5.3.3 M2M API Protocol - URL-API (REST M2M API).....	37
5.3.4 M2M API Protocol - Telnet	40
5.3.5 M2M API Protocol - Modbus/TCP	45
5.3.6 M2M API Protocol - MQTT-flex.....	49
5.3.7 M2M API Protocol - Netio Push	53
5.3.8 M2M API Protocol - SNMP	55
5.4 Cloud	59
5.5 Users	62
5.6 Schedules.....	63
5.7 Settings	66
5.7.1 Wi-Fi	66
5.7.2 Network Configuration	67
5.7.3 Date / Time	71
5.7.4 Firmware.....	72
5.7.5 System.....	74
5.8 Log.....	76
6 DECLARATION OF CONFORMITY (RED CE)	78
7 NETIO products overview.....	79

Introduction

Thank you for purchasing this product of NETIO products a.s. Before using your product, please read this **User Manual (MAN)** and the included **Quick Installation Guide (QIG)** to avoid problems with incorrect installation or use.

 **Caution:**

The product works with mains voltage. Mishandling may damage it or result in injury or death.

1 Safety notices

1. Never remove the device cover if the relay terminals are connected to the power grid!
2. The local electrical system must include a power switch or a circuit breaker and overcurrent protection.
3. The manufacturer is not liable for any damage caused by incorrect use of the device or by operating it in an unsuitable environment.
4. The device is not rated for outdoor use.
5. Do not expose the device to strong vibrations.
6. Unauthorized modifications may damage the device or cause a fire.
7. Protect the device from liquids and excessive temperatures.
8. Make sure the device does not fall.
9. Only electrical appliances approved for use with the electrical network may be connected to the device.
10. Do not connect multiple devices in series.
11. The cable plug must be easily accessible.
12. The device is completely switched off only when unplugged.
13. If the device malfunctions, disconnect it from the electrical outlet and contact your vendor.
14. Do not cover the device.
15. Do not use the device if it appears to be mechanically damaged.
16. Make sure that the input and output cables are rated for the respective current.

2 General characteristics

- Metered outputs: 2 channels
- Digital Outputs: 4 in total
- DO Metered power outputs switching element: 2x Relay + ZCS (Out 1, 2: SPST-NO) - Max 16A
- DO Relay outputs switching element: 2x Relay (Out 3, 4: NO/NC) - Max 2A
- DI (Digital Inputs): 2 (dry contact) + S0 counter (4 bytes)
- LAN interface 10/100 Mbps (RJ-45)
- WiFi interface: 802.11 b/g/n; 2.4GHz (secured / unsecured), internal antenna
- WiFi encryption: WEP, WPA, WPA2
- AP mode for connecting the device to a local WiFi network (network selected from a list)
- Built-in web server for device configuration and control
- Password-protected login into device configuration
- Electricity consumption metering on two channels: [V, Hz, A, W, Wh, TPF, °]
- Measurement accuracy <1%
- ZCS (Zero Current Switching)
- IOC (Independent Output Control)
- PowerUp state - (ON / OFF / LAST)
- Overvoltage protection
- Operating temperature range: -20°C to +55°C
- Supported protocols: DNS, NTP, DHCP, HTTP, uPNP
- Supported M2M protocols: Modbus/TCP, Telnet, SNMP, MQTT, Http Push, XML, JSON, URL API

3 Specifications

Power	100-240 V; 50/60 Hz; 16 A
DO Metered power outputs	2x, 16 A total / 16 A per output (Out 1, 2)
Surge protection	Type 3 (CAT III)
DO Power Output relays	Micro-disconnection (μ) (resistive load), SPST-NO 1E5 switching cycles, max. 1.5 kV pulse voltage Switch heat and fire resistance class 1 ZCS (Zero Current Switching)
Electrical load	ZCS (Zero Current Switching) - Resistance load compatible - Capacitive load compatible - Inductive load compatible
DO Relay outputs switching element	2x Relay (Out 3, 4: NO/NC) - Max 2A
DI (Digital Inputs)	2x Dry contact input with S0 impulse counter (32bits, non resetable)
Terminal blocks	Wire range: 2.5mm ² (22-14AWG) Torque: 0.5Nm (4.4Lb-In) Strip length: 5-6mm
Network interfaces	1x Ethernet RJ-45 10/100 Mbit/s 1x Wi-Fi IEEE 802.11 b/g; 2.4GHz
Internal consumption	Max 2W
Environment	IP30, protection rating = class 1 Operating temperature -20°C to +55°C Device rated for pollution degree 2. Designed for continuous operation in altitudes up to 2000 m. Does not require additional cooling

3.1 Features

ZCS (Zero Current Switching)


ZCS (Zero Current Switching) function ensures that the relay contact is closed at the moment of zero voltage and opened at the moment when zero current flows through it.

Closing and opening at these exact moments has a number of advantages:

- The negative effects of inrush current on the lifetime of the relay in the NETIO device are significantly reduced.
- Reduced probability of a circuit breaker tripping in the circuit branch where the appliance with a high inrush current is connected.
- Significantly improved lifetime of switching supplies in appliances that are connected to the socket (especially in case of frequent switching on and off).
- Significantly reduced electromagnetic interference caused by repeated switching on and off.

Zero current switching (ZCS) significantly improves the lifetime of the NETIO device and the connected end devices. This function is particularly important in case of frequent switching.


Note: ZCS is only for Output 1 and Output 2 (metered and switched power outputs).

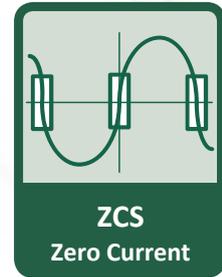

IOC (Independent Output Control)

Independent Output Control function of the NETIO device uses an independent system that ensures a stable operation of the output even if the main system is being restarted, updated, or is booting.

Thanks to IOC, the controlled output can power devices that, for technical reasons, must be powered without interruption (such as servers). The output control is completely independent from the WiFi or LAN communication subsystem.

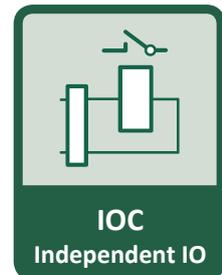

PowerUp State

The PowerUp State parameter (sometimes also called **Cold start**) defines the behavior of the 110/230V power output during the first milliseconds to seconds after powering up the device, before the LAN/WiFi communication with a master system is established.

For some applications, it is important to set the correct state of a power output immediately after power is turned on (or restored). With servers in particular it is important to avoid undesired momentary switching.

Possible settings for NETIO device


- **On**
- **Off**
- **LAST** state restores the last state before the power was disconnected



Electrical measurements

PowerDIN 4PZ measures relevant electrical parameters.

Parameter	Range	Units	Resolution	Accuracy
Voltage	90,0 - 250,0	V	0,1	<1%
Frequency	45,0 - 65,0	Hz	0,1	<1%
Current	0,005 - 16,000	A	0,001	<1%
TPF (True Power Factor)	0,00 - 1,00	-	0,01	<1%
Phase	0 - 360	°	0,01°	<1%
Output power	0 - 3600	W	1	<1%
Energy	0 - 4294967296	Wh	1	<1%
Reverse Energy	0 - 4294967296	Wh	1	<1%

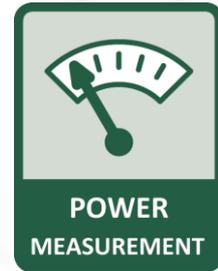

Quick WiFi connection setup (AP mode installation)

- NETIO PowerDIN 4PZ creates a WiFi network that you connect to with your PC or mobile phone.
- It then scans for WiFi networks in the vicinity, and lets you choose from a list and type the password.
- NETIO PowerDIN 4PZ then confirms the connection to the network and displays the assigned IP address.
- NETIO devices can be discovered in the LAN using the [NETIO Discover](#) tool.



NFC Preconfig

PowerDIN 4PZ can be pre-configured using NFC even without being switched on. This requires a mobile phone with an Android system, NFC function, and a mobile application „NETIO Mobile 2“.

The settings configured over NFC will be applied when the device is powered on.

In this way, it is possible to configure or show:

- Set SSID and password for connecting to WiFi
- Show assigned IP address in DHCP mode



For authentication, the existing password to the web administration “admin” account is used (default “admin” / “admin”).

3.2 Drawings

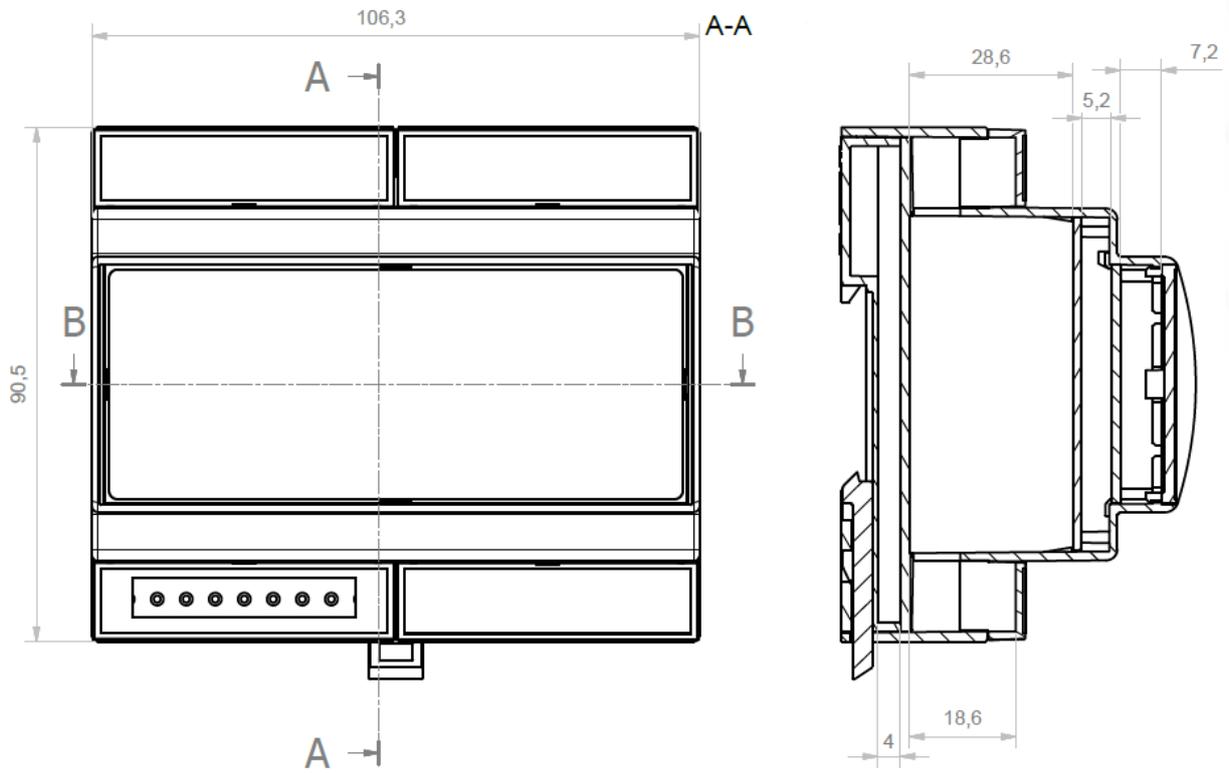


Figure 1 - PoweDIN 4PZ front and side view (millimeters)

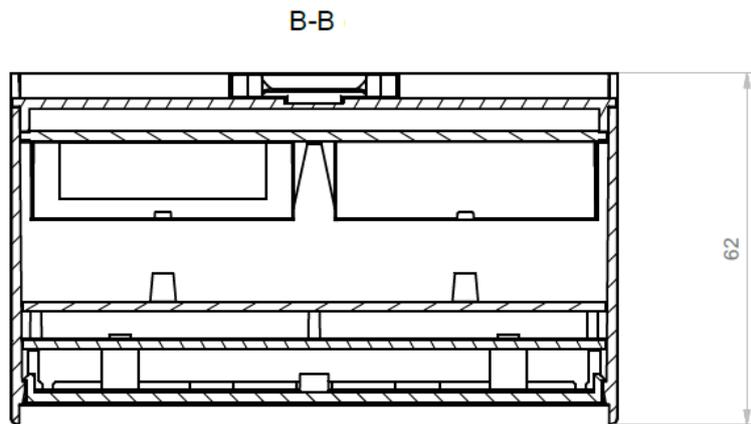


Figure 2 - PoweDIN 4PZ cut view (millimeters)

3.3 Device description

1. 1x RJ45 LAN jack
2. LEDs (OUTPUTS, INPUTS, M2M and WiFi)
3. RJ45 LEDs – Ethernet states (yellow and green)
4. "SETUP" button (under plastic plate with green label)
5. 230V Input and Outputs terminal blocks
6. Output relay terminal blocks
7. Digital Inputs terminal block

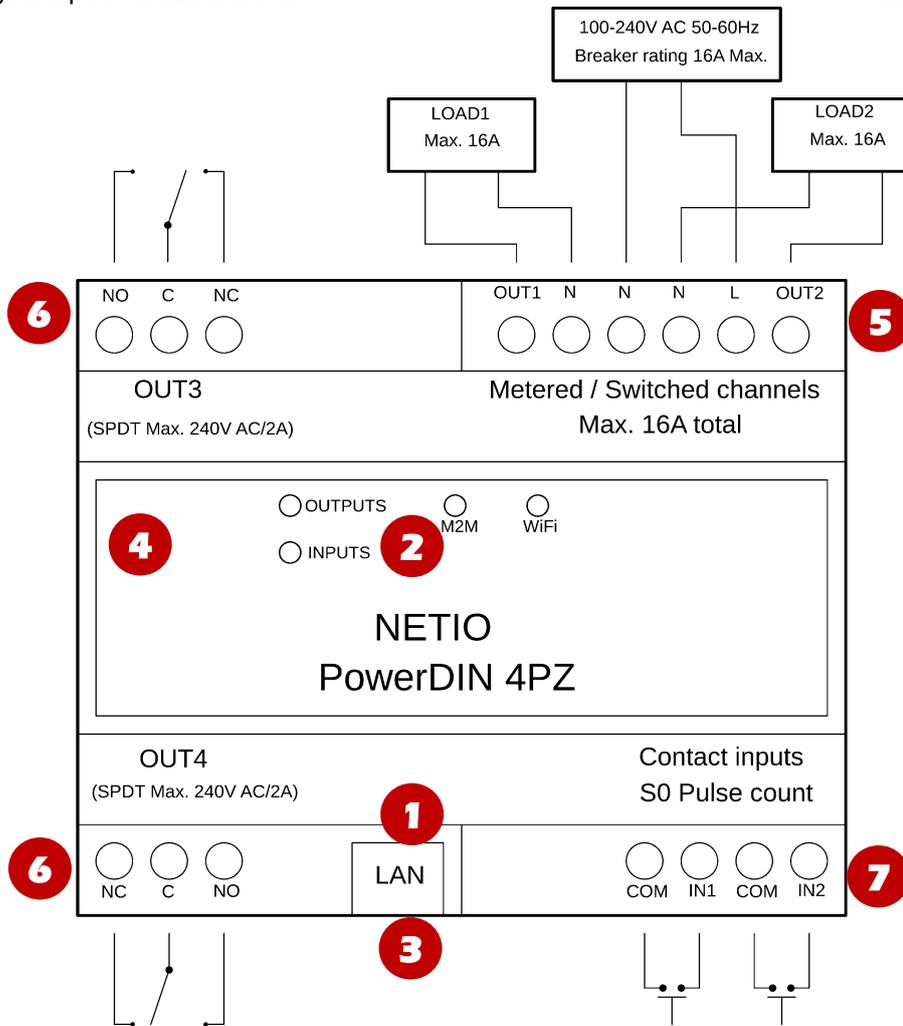


Figure 3 - PoweDIN 4PZ description

SN (serial number) on the label

-----xx
24A42C38E9EA

WiFi network in AP mode:

PowerDIN-AP-xx

PowerDIN-AP-EA



Figure 4 - PoweDIN 4PZ SN label

3.4 LED and button functions

LED indicators

OUTPUTS (green)	Light when at least one Output is ON. Blink when Output state change.
INPUTS (green)	Blink when some Input state change
M2M (red)	Blink when some M2M communication is in progress. Communication with NETIO Cloud included (if Cloud enabled). (communication of WEB administration or Mobile app is not indicated)
WiFi (yellow)	Light when connected to WiFi
RJ45 LEDs (green and yellow)	Ethernet Link and Activity

SETUP button (under the top plate)

Remove the top plate with green label - the button "DEFAULT" is on the left side.

Restoring factory defaults	Disconnect the device from the power. Press and hold the button. Connect the device to the power grid (button is pushed) and wait at least 10 seconds. After green LED OUTPUTS blinks, release the button. The device reverts to factory settings and the AP mode is activated (if no Ethernet cable connected).
----------------------------	--

3.5 Minimum system requirements (for configuration)

A device with an Internet browser (Firefox, Chrome, Safari, Microsoft Internet Explorer, Opera, Mozilla etc.) that has JavaScript and cookies enabled.

3.6 Package contents

- NETIO PowerDIN 4PZ
- Quick Installation Guide (QIG)



Figure 5 - PoweDIN 4PZ package

4 Configuration and control

NETIO PowerDIN 4PZ can use the Ethernet connection (RJ45) or WiFi connection to network. The description of connection options below (LAN or WiFi) apply for the new devices or devices after “Restoring factory defaults”.

Connect the NETIO PowerDIN 4PZ device to the power grid using the terminal blocks.

4.1 Connecting PowerDIN 4PZ to LAN

- Connect your NETIO device to a LAN with a network cable (RJ45).
- Wait about 30 seconds until the device starts and address is provided from a DHCP server. The WiFi is completely turned off in this case.
- Continue in section “[Detecting and configuring the IP address](#)” below.

Note: It is mandatory to have DHCP server in the network for the first connection to LAN and Setup. The IP can be switched to Static afterwards.

4.2 Connecting PowerPDU 4PZ to a local WiFi (AP Mode)

WiFi is enabled only if Ethernet cable is not connected!

- When the device is powered up for the first time, it enters the “AP mode” (Yellow WiFi LED flashing quickly).
- Connect from PC, tablet or smartphone, to WiFi “PowerDIN-AP-xx” (Figure 6).
- Device configuration page should open automatically. If not, open a web browser and enter <http://10.0.42.1> You will see NETIO PowerDIN 4PZ WiFi configuration page. (Figure 7).

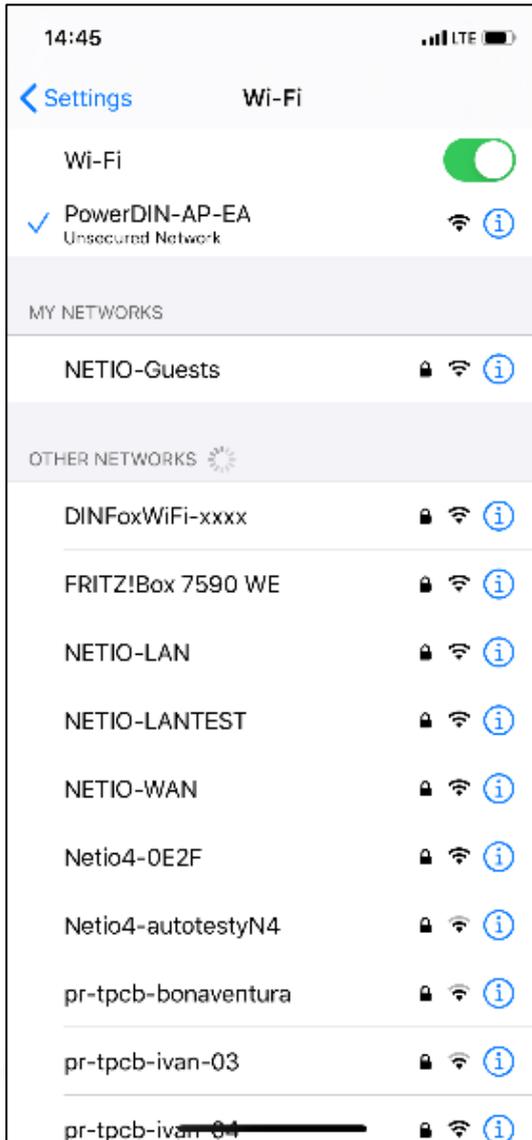


Figure 6 - Connecting to PowerDIN 4PZ AP

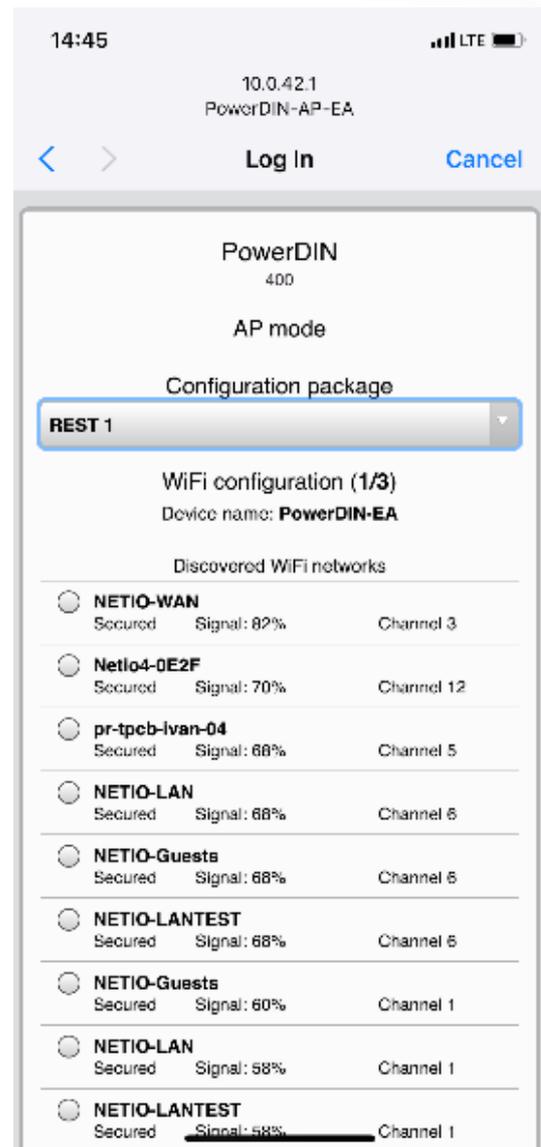


Figure 7 - Web Interface in AP mode

- Select your network in the list of detected networks and click “Next” (Figure 8).
- Enter the password for the selected WiFi network. You may also change the device name. If your network does not use DHCP, unselect this option and manually enter the IP address and other network parameters (Figure 10; for experts only). Click “Next” to confirm (Figure 9).

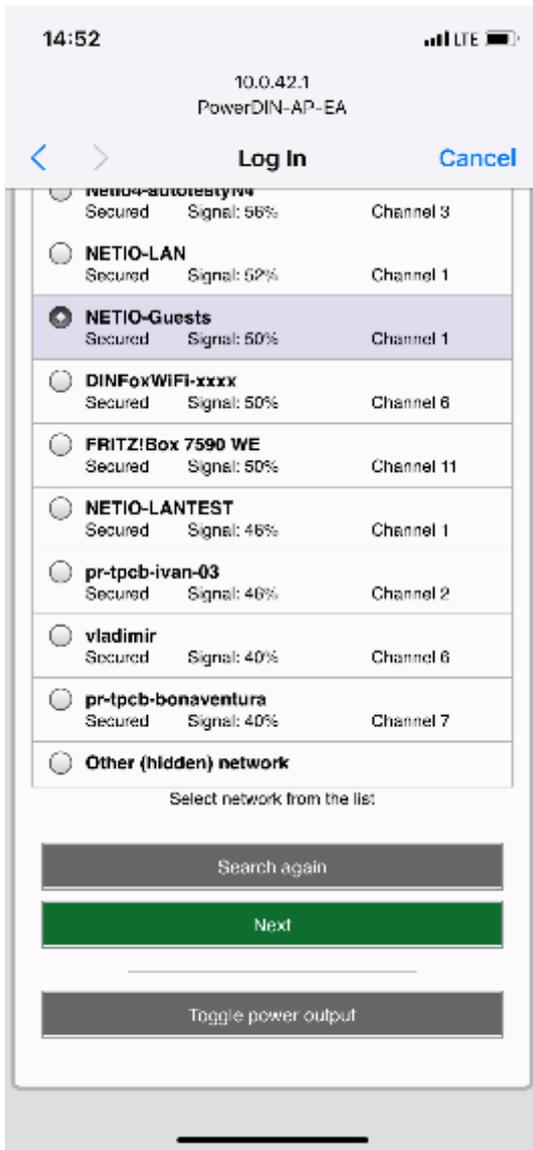


Figure 8 - Network selection in AP mode


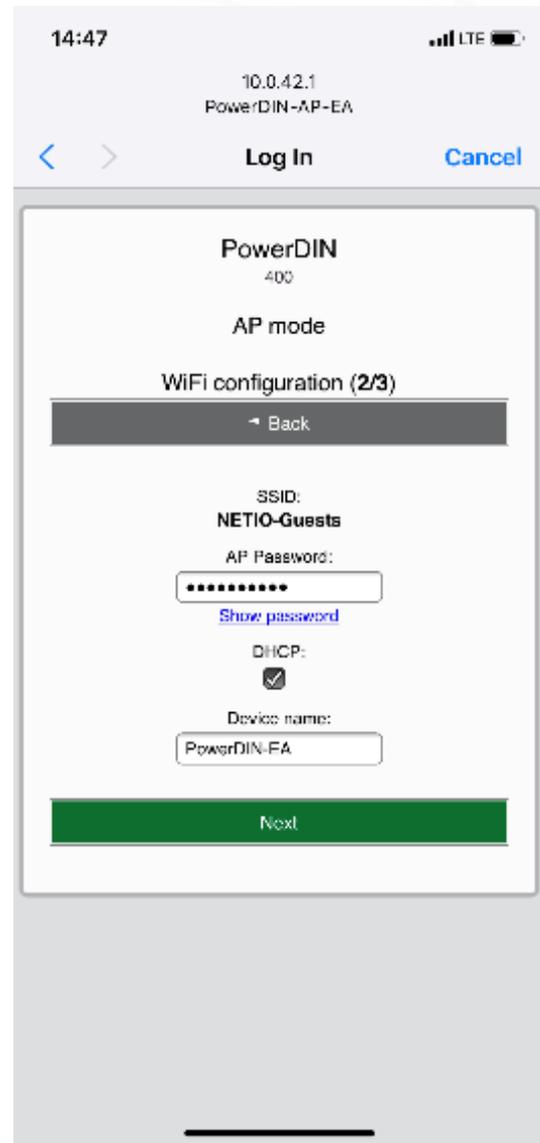


Figure 9 - Connecting to Wi-Fi in AP mode

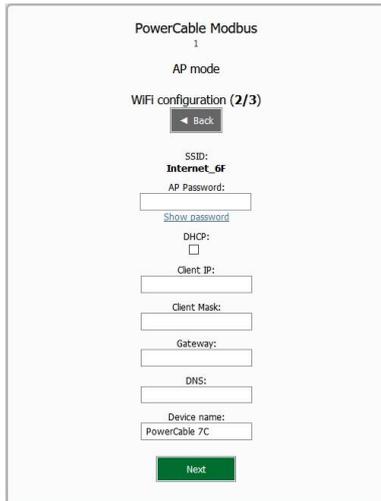

If you do NOT use a DHCP server in your network, set the following parameters:

- AP Password - password for the network to which the PowerDIN 4PZ will be connected
- Client IP - IP address in your network address range
- Client mask - network mask for your network
- Gateway - gateway for your network
- DNS - DNS server for your network or a public DNS, e.g. 8.8.8.8
- Device name - specify a name under which the PowerDIN 4PZ will be visible in the local network

For more information, see chapter 5.6 Network Configuration

Figure 10 - Configuring the network IP parameters

- A page with the connection result is displayed. If it shows “WiFi status: Connected“, check the network parameters and then click “Save&Connect” to save the configuration (Figure 11). The device then exits the AP mode, connects to the selected WiFi network, and displays a network configuration summary page (Figure 12). WiFi connection is indicated with the yellow LED.

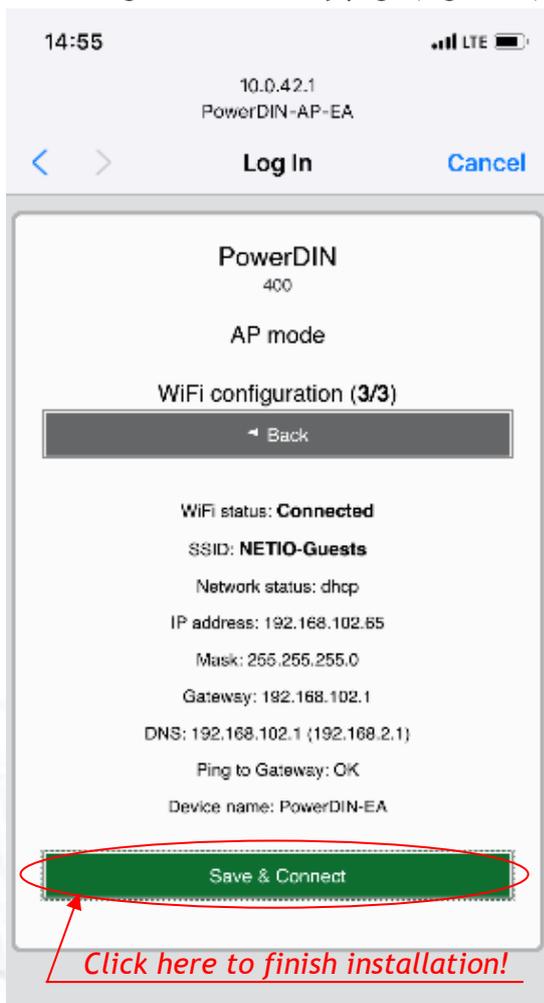


Figure 11 - Configured Wi-fi parameters

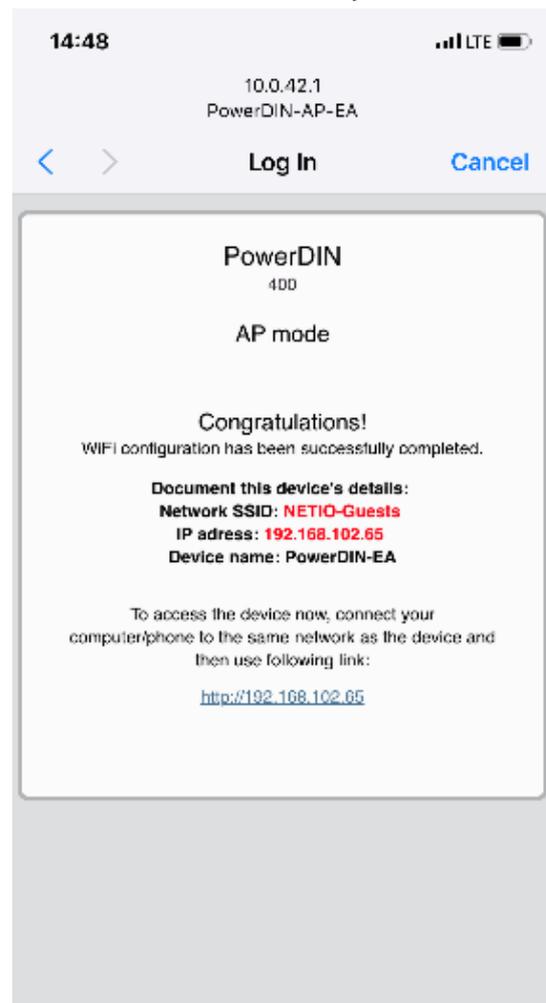


Figure 12 - Network connection info

4.3 NFC installation in 60 seconds

NFC (Near Field Communication) is a technology supported by some mobile phones (and tablets).

Using a mobile phone with NFC support and the NETIO Mobile 2 app, even a device that is powered off can be configured. The device will apply the new configuration as soon as it is powered on.

For example:

- NFC can be used to configure the WiFi connection parameters (network SSID + password) in the PowerDIN 4PZ. When the PowerDIN 4PZ is powered on, it automatically connects to the specified WiFi network.
- NFC and the mobile app can be used to find out the IP address assigned to the installed WiFi device.


For authentication NFC config, the existing password to the web administration “admin” account is used (default “**admin**” / “**admin**”).

4.3.1 NETIO Mobile2 for Android

NETIO Mobile2 application is for control NETIO devices produced after 2016.

Features:

- Switch On / Off / Restart each power socket on local network.
- Show power consumption on each power output (if supported).
- Searching NETIO devices in local network
- Install NFC enabled NETIO devices

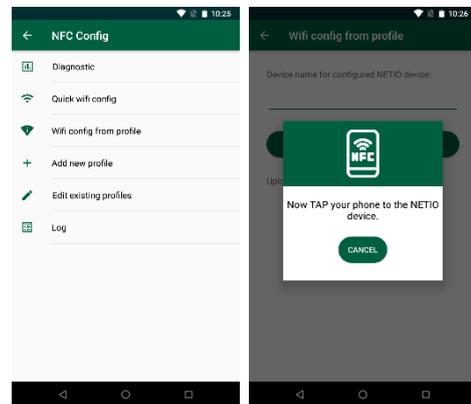

<https://play.google.com/store/apps/details?id=cz.netio.netio>

4.4 Detecting and configuring the IP address

If you have followed the instructions in the previous chapter, you know the NETIO device’s IP address, whether it was assigned by a DHCP server or configured manually. If you forgot the IP address, or if you have received a pre-configured device, you will need to find out its IP address.

Use Windows based NETIO Discover utility, available for download at <http://www.netio-products.com/en/software/netio-discover>.

Depending on your operating system, choose the .exe file (Windows) or the .jar file (Linux or Mac). To run the .jar file, JAVA RE is needed. It is available at: www.java.com

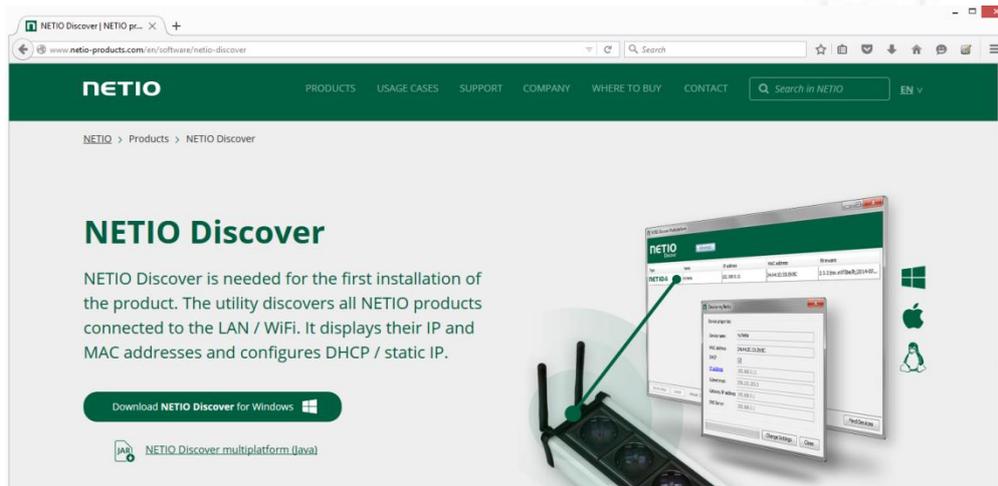


Figure 13 - NETIO Discover web interface

To successfully discover the IP address, the controlling system must be in the same LAN as the NETIO device.

If the discovered IP address belongs to a different address range than that of your WiFi network, we recommend resetting the device to factory defaults (see chapter [Restoring factory defaults](#)) and then configuring it according to chapter [Configuration and control](#).

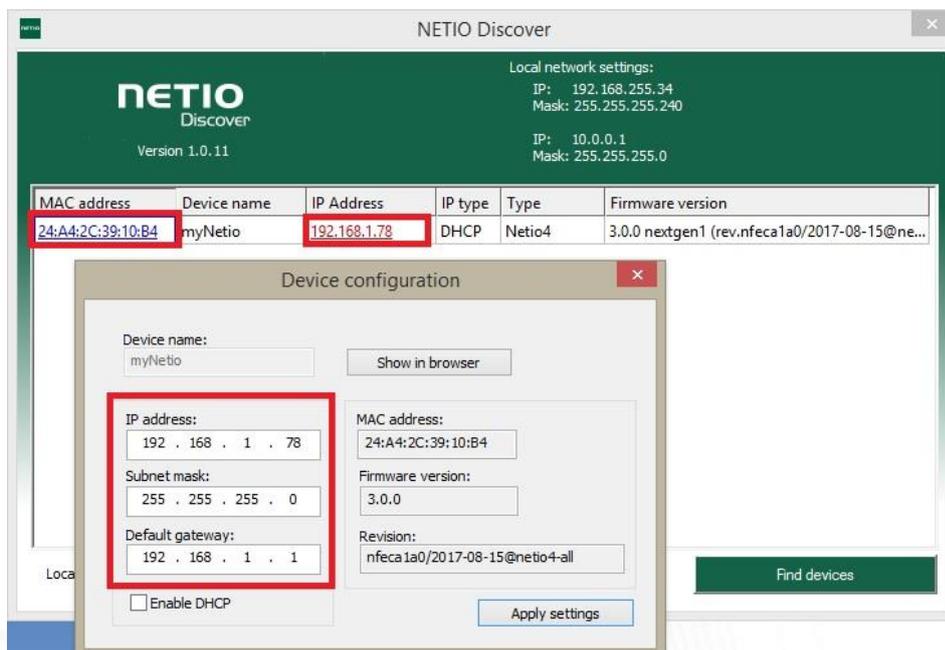


Figure 14 - Discovering and configuring network parameters using NETIO Discover

To change the IP address, click the value in the MAC address column, uncheck Enable DHCP and specify the IP address, Subnet mask and Default gateway. After applying the settings, NETIO device will be accessible at the specified address.

Enter the IP address into a web browser or the NETIO Mobile app and log in to the device.

Note: For MAC or Linux users use the NETIO Discover Multiplatform version.

4.5 Login to device web

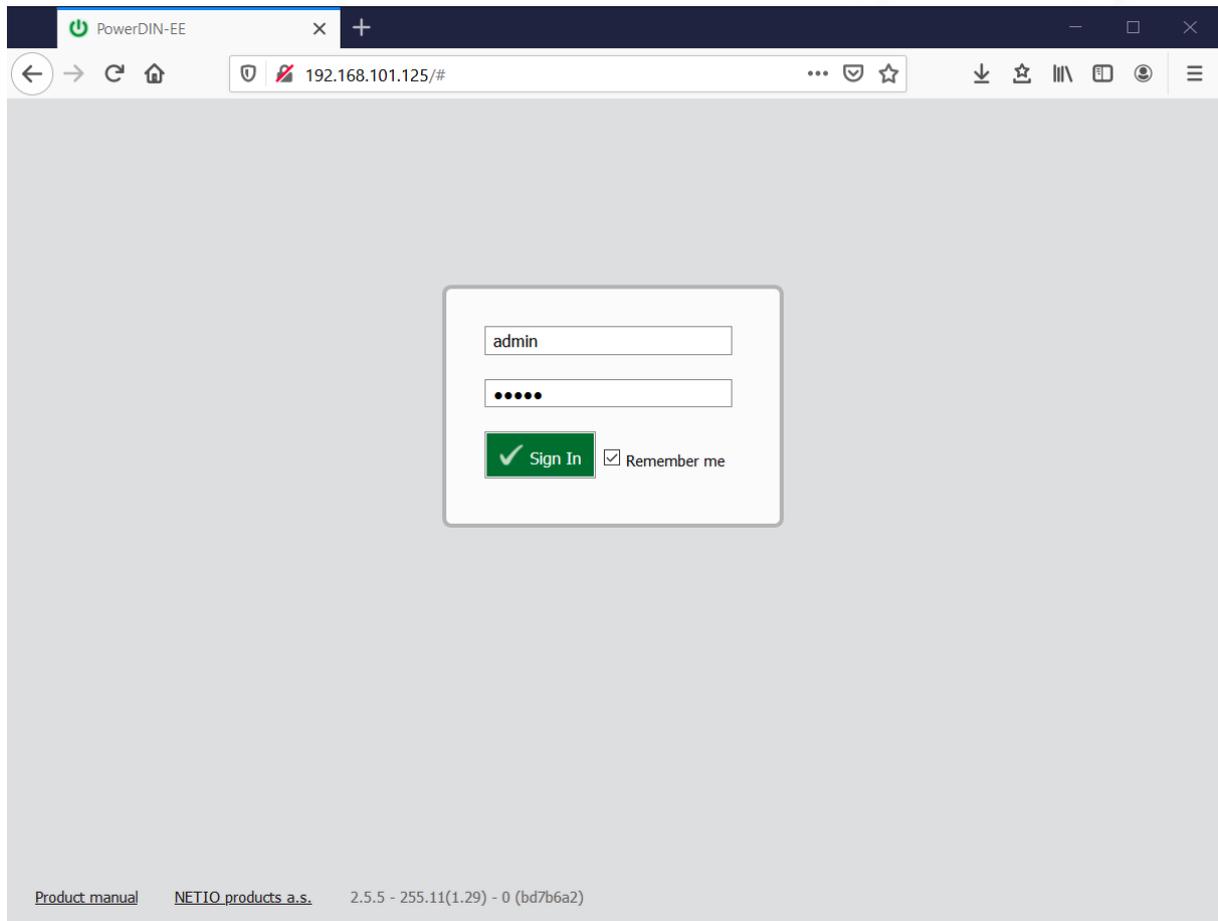


Figure 15 - PowerDIN 4PZ login dialog

To log in, use **admin / admin**
(default login username / password)

4.6 Restoring factory defaults

This operation deletes all user settings and restores the configuration to the factory defaults. It is useful when the device is in an unknown state or does not behave as described in this manual.

Procedure:

1. Turn off the PowerDIN 4PZ.
2. Remove the top plate with green label - the button "DEFAULT" is on the left side.
3. Press and hold the button.
4. Connect the device to the power grid (button is still pushed) and wait at least 10 seconds. After green LED OUTPUTS blinks, release the button.
5. The device reverts to factory settings and the AP mode is activated (if no Ethernet cable connected).



Forgotten password

The reset to factory defaults is also used when the password has been forgotten. After restoring the factory defaults, the username and password to access the PowerDIN 4PZ will be "admin" / "admin".

4.7 Controlling the output manually

The outputs can be switched on/off (toggled) by pressing the button quickly 3 times in a row.

The use of this feature is recommended only for troubleshooting etc.

1. Remove the top plate with green label - the button "DEFAULT" is on the left side.
2. Press the "DEFAULT" button three times fast to toggle the outputs.

Note: If at least one output is ON the "toggle" by button change all outputs to OFF. If all outputs are OFF the "toggle" change all to ON.

5 Web interface

5.1 Outputs

In the left menu, click **Outputs**. A screen showing the output appears. The output can be controlled directly with two buttons:

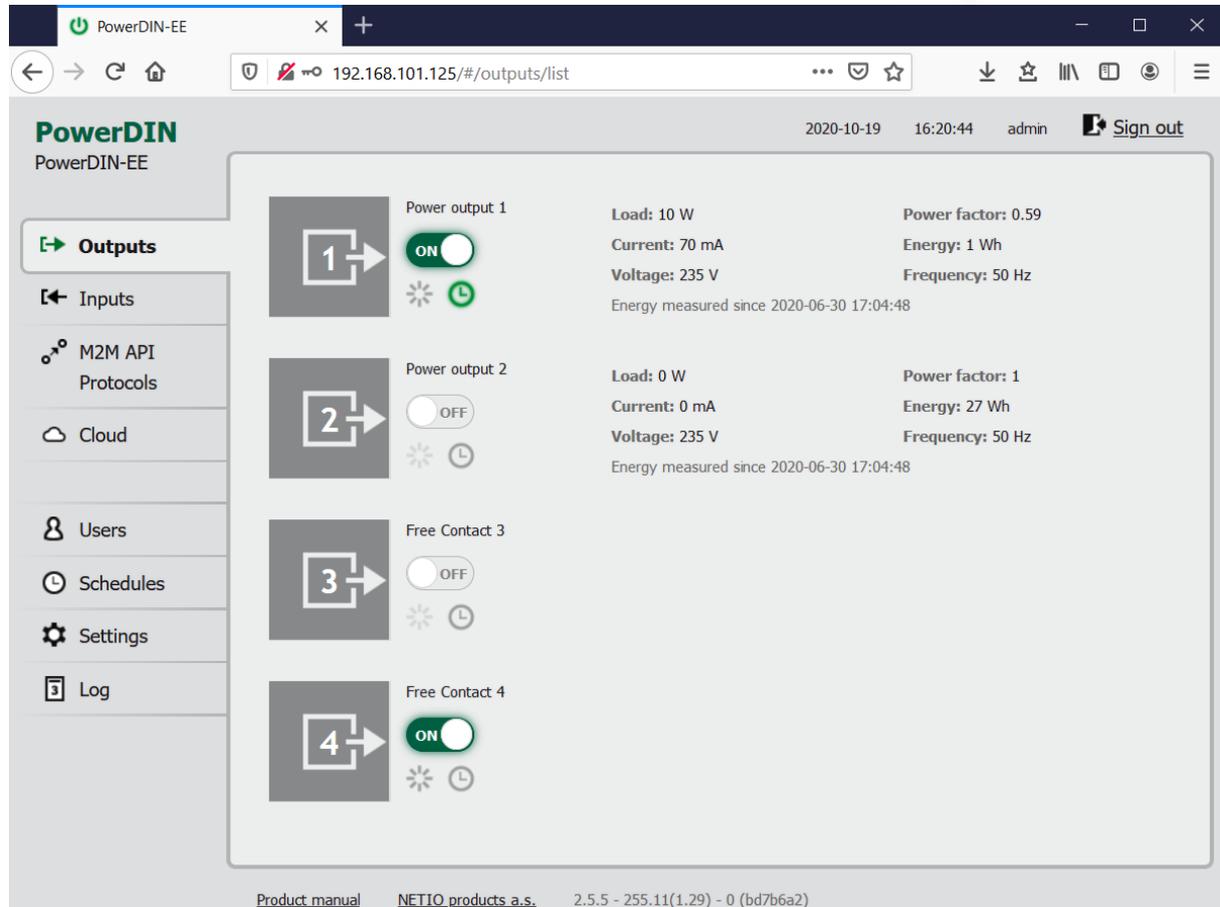


Figure 16 - Controlling the output

The  ON/OFF button controls the output directly. When the output is on, the button is green; when the output is off, the button is grey . When switching the output off, a confirmation dialog appears:

Do you really want to turn off output_1?

Turn Output Off

Cancel

Don't ask me again

Click **Turn Output Off** to confirm the switch-off or **Cancel** to keep the output switched on.

To suppress this dialog in the future, check **Don't ask me again**.

The  **Reset** button switches the output off and then back on. It is active only when the output is On. A confirmation is requested before the action is performed. The function is enabled only when the output is switched on. When the output is switched off, the Reset button is disabled.

Do you really want to reset output_1?




Don't ask me again

Click **Reset** to confirm the action or **Cancel** to cancel it.
To suppress this dialog in the future, check **Don't ask me again**.

The  **Scheduler** button enable/disable a Scheduler feature for the specific output. Details and setting are described below at chapter [Outputs - Schedule](#).

5.1.1 Outputs - Energy measurements

PowerPDU 4PZ measures the following electrical parameters every 500ms for Output 1 & 2. The values in the web interface are updated every 5 seconds.

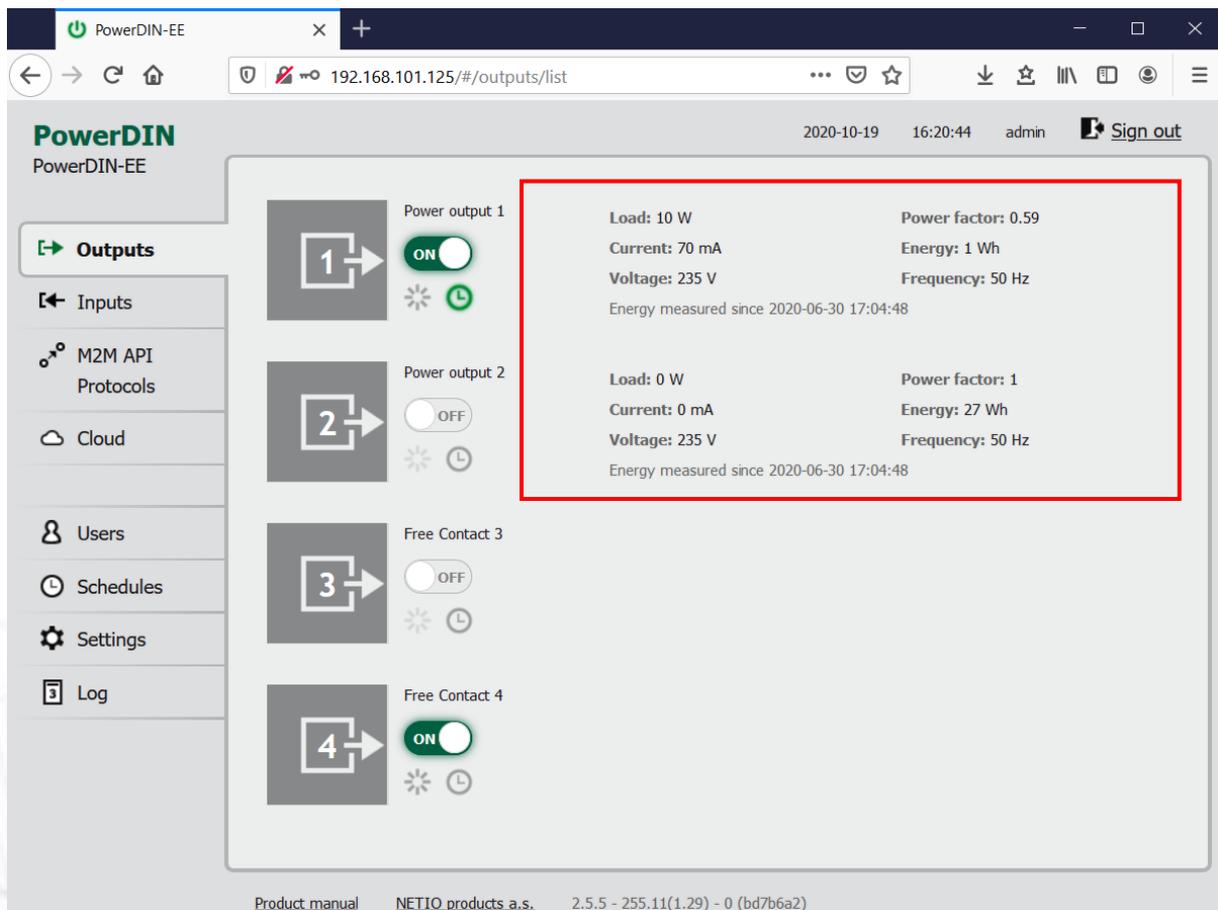

The screenshot shows the PowerDIN-EE web interface with the following data for Power output 1 (highlighted in red):

Parameter	Value
Load	10 W
Current	70 mA
Voltage	235 V
Power factor	0.59
Energy	1 Wh
Frequency	50 Hz
Energy measured since	2020-06-30 17:04:48

The interface also shows the following data for Power output 2:

Parameter	Value
Load	0 W
Current	0 mA
Voltage	235 V
Power factor	1
Energy	27 Wh
Frequency	50 Hz
Energy measured since	2020-06-30 17:04:48

The interface also shows the status of Free Contact 3 (OFF) and Free Contact 4 (ON).

Figure 17 - Measured values

Load in watts [W] corresponds to the immediate current and voltage ($P = U * I * TPF$).

Current in amps [A] shows the immediate current flowing through the output.

Voltage in volts [V].

TPF (True Power Factor) shows the ratio of active and apparent power, or the ratio of resistance and impedance. A value less than 1 means that there is a phase difference between the current and the voltage, i.e. higher energy losses compared to a purely resistive load.

Phase in degrees (°) is the value of a phase shift between current and voltage. Depends on a load type connected to output.

Energy in watt-hours (Wh / kWh) is the cumulative energy consumed over a time interval. The value is the total consumption at the output since the last reset of the counter.

By default, the cumulative energy consumption is counted from the time the NETIO device was first powered on. To reset the counter, go to the **Settings** > **System** tab and click the **Reset Power Consumption Counters** button (see Figure 18). This restarts the measurements as of the current moment.

Frequency in hertz [Hz].

The screenshot shows the PowerDIN-EE web interface. The browser address bar displays the URL `192.168.101.125/#/settings/system`. The page title is "PowerDIN-EE". The left sidebar contains navigation options: Outputs, Inputs, M2M API Protocols, Cloud, Users, Schedules, Settings (selected), and Log. The main content area is titled "System" and displays various system parameters and controls:

- Uptime: 1 hours 4 minutes 9 sec
- Firmware version: 2.5.5 - 255.11(1.29) - 0 [Upgrade](#)
- Device name: PowerDIN-EE
- HTTP port: 80
- Enable Periodic device restart
- Restart period: 1440 minutes, does not affect the Output state
- Debug Log:
-
- Blink with status LEDs for 1 minute.
- (highlighted with a red box)
-
- Export and import device configuration:
 -
 - Configuration file: Soubor nevybrán.
 -

At the bottom of the page, there is a footer with the text: "Product manual NETIO products a.s. 2.5.5 - 255.11(1.29) - 0 (bd7b6a2)".

Figure 18 - Resetting the consumption counter

5.1.2 Outputs - General

Click the picture of the output to open detailed settings.

The  **General** tab configures basic parameters for controlling the output.

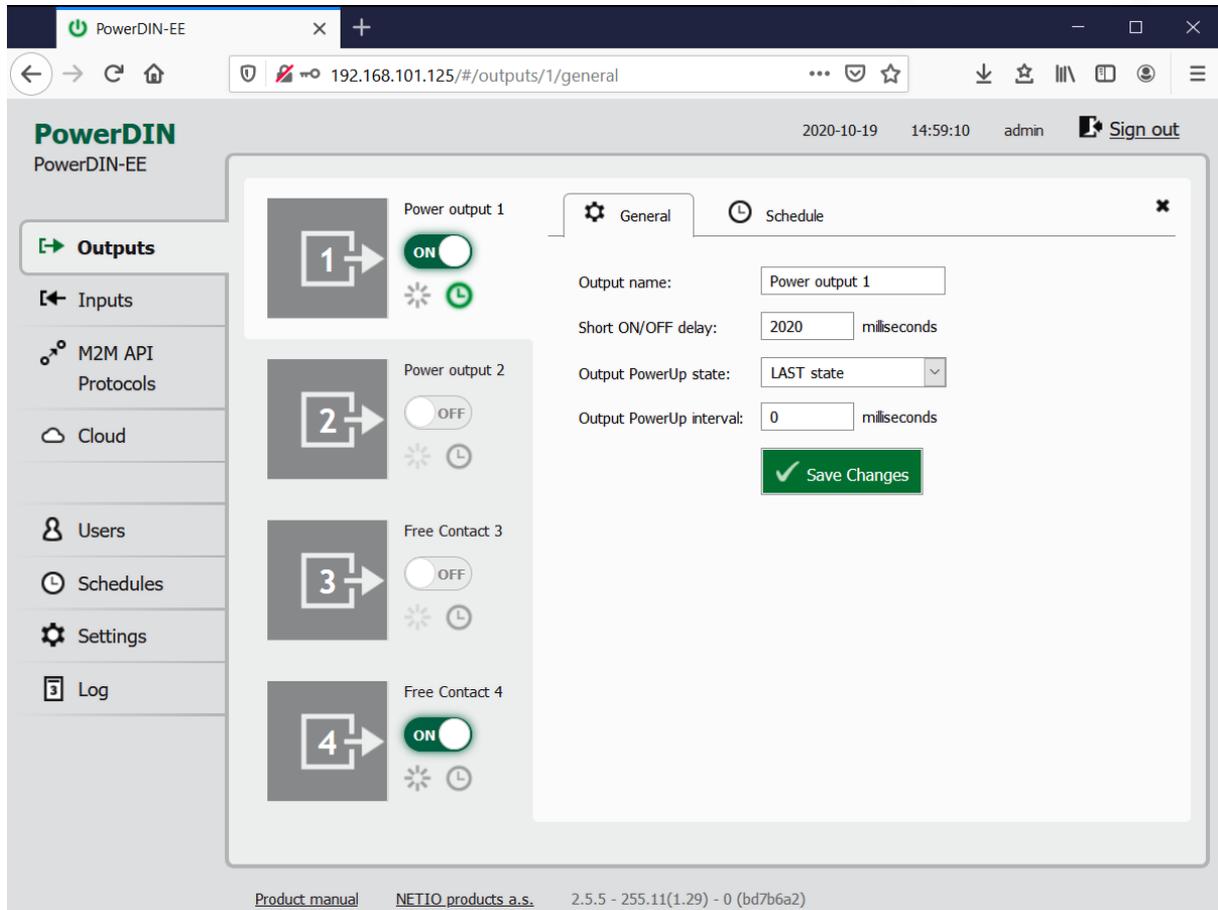


Figure 19 - General output configuration

Output name is shown above the two control buttons to improve clarity.

Short ON/OFF delay is an integer specifying, in milliseconds, the duration for the Short OFF (power cycling) and Short ON actions.

During this interval, any attempts to switch the output state via M2M API protocols are ignored.

Output PowerUp state defines the state of the output whenever the device is powered up or restarted. The output can be switched on (ON), switched off (OFF), or set to the last state before the restart (LAST).

Click **Save Changes** to save the settings.


To close the configuration dialog, click the  symbol in the top right corner.

5.1.3 Outputs - Schedule

The  Scheduler function can be used to switch the output on and off at specified times. Select a schedule to specify when the output should be turned on. After selecting a schedule, the on-times for the output according to that schedule are shown graphically. Click **Save Changes** to confirm the selected schedule. After the changes are saved, the Scheduler is **not** enabled/activated if it is currently disabled. If the Scheduler is enabled the current interval is applied so the output state may change according to selected schedule.

The displayed schedule cannot be changed in the Output - Schedule view. To change a schedule, click **Edit schedules**. It opens the main tab Schedules (details in chapter [Schedules](#)).

To enable or disable the Scheduler for a given output, click the  Scheduler button next to that output. When the Scheduler function is disabled, the outputs stay in their current states. When it is enabled, the outputs are set according to the schedule.

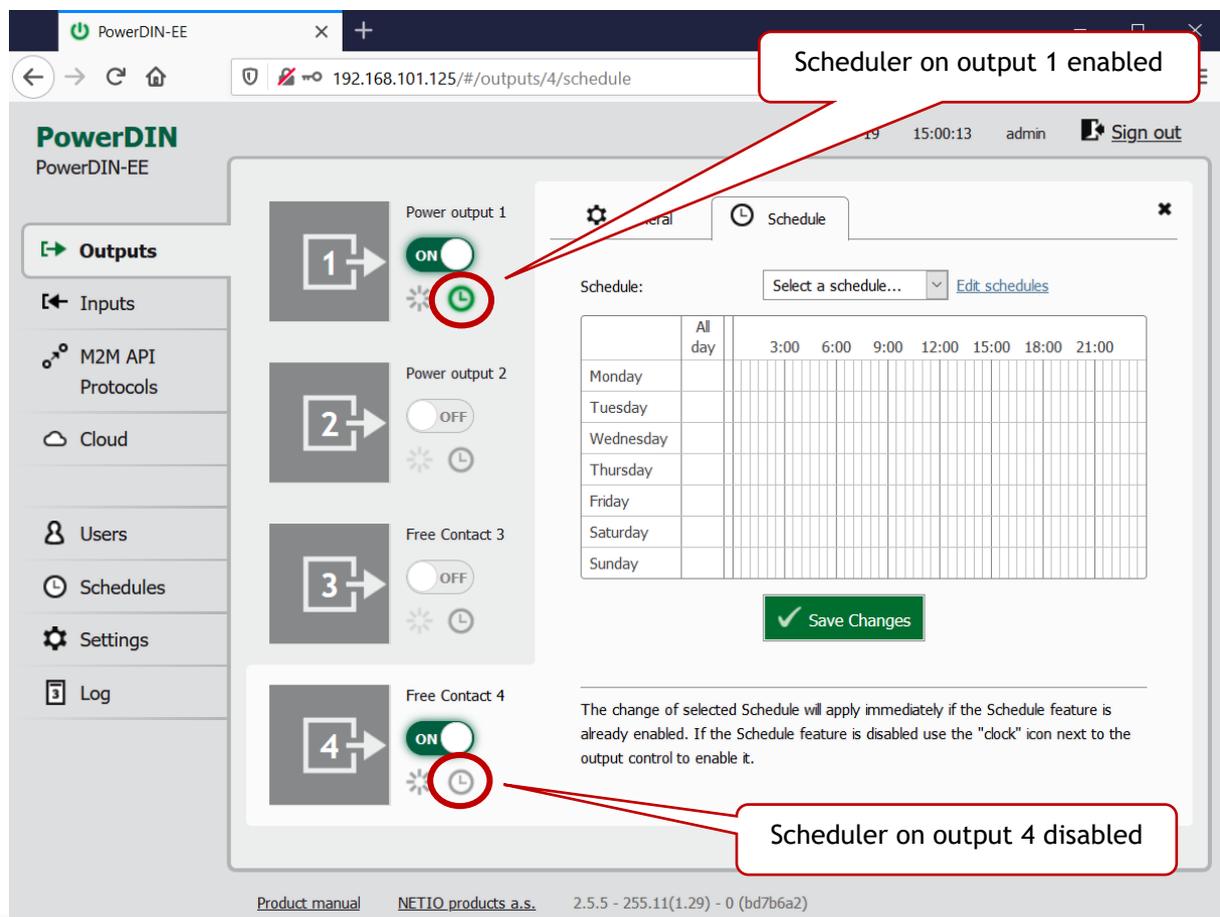

The screenshot shows the 'PowerDIN-EE' web interface. The left sidebar contains navigation options: Outputs, Inputs, M2M API Protocols, Cloud, Users, Schedules, Settings, and Log. The main content area displays four outputs: Power output 1, Power output 2, Free Contact 3, and Free Contact 4. Each output has a status indicator (ON/OFF) and a scheduler icon (clock). The scheduler icon for Power output 1 is highlighted with a red circle and a callout box stating 'Scheduler on output 1 enabled'. The scheduler icon for Free Contact 4 is also highlighted with a red circle and a callout box stating 'Scheduler on output 4 disabled'. The interface includes a 'Schedule' section with a dropdown menu to 'Select a schedule...' and an 'Edit schedules' link. Below this is a grid showing the schedule for each day of the week (Monday to Sunday) across time slots (3:00, 6:00, 9:00, 12:00, 15:00, 18:00, 21:00). A green 'Save Changes' button is visible. At the bottom, there is a footer with 'Product manual', 'NETIO products a.s.', and version information '2.5.5 - 255.11(1.29) - 0 (bd7b6a2)'.

Figure 20 - Configuring the Schedule

5.2 Inputs

The PowerDIN 4PZ has two inputs providing their status and S0 counter value.

5.2.1 Digital Inputs - Status and S0 Counters

In the left menu, click Inputs. A screen showing the inputs appears.

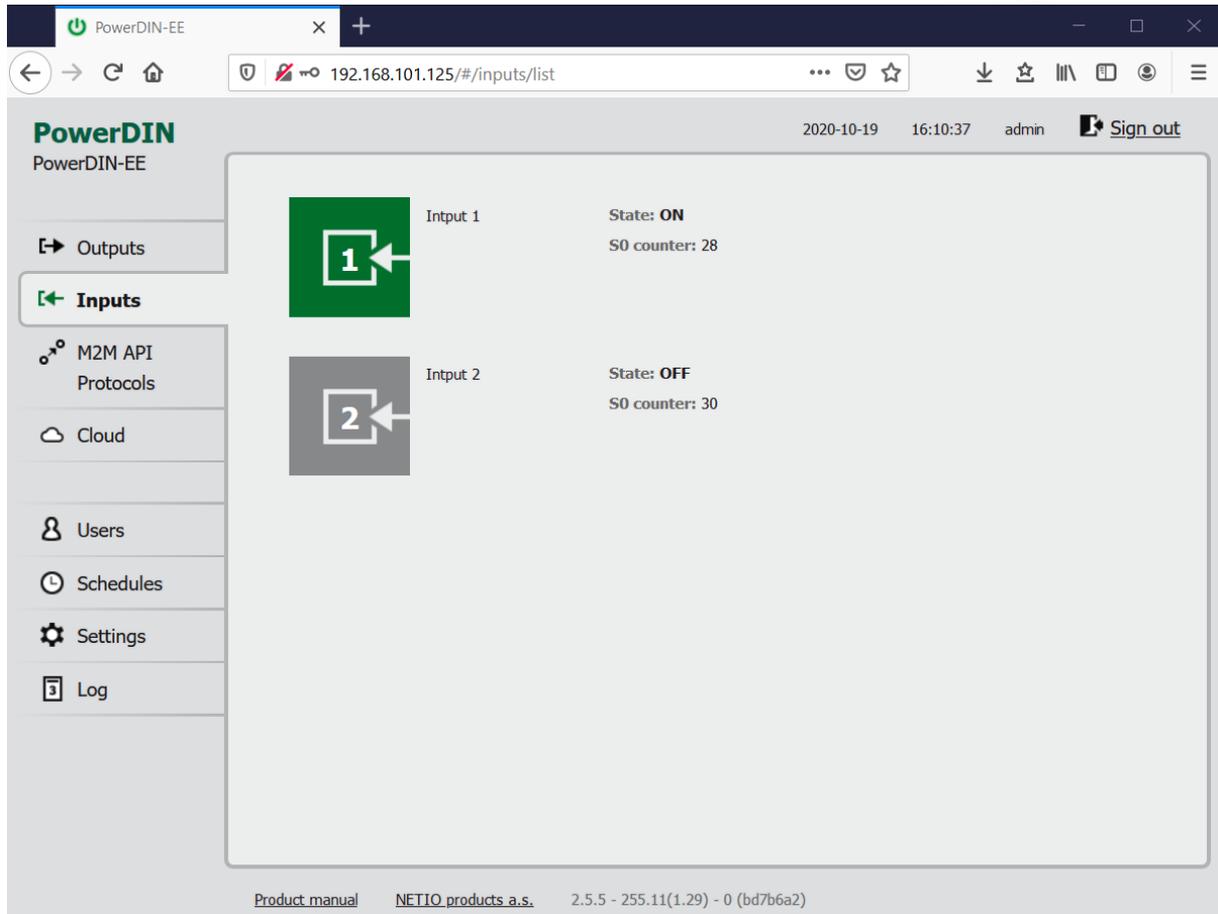


Figure 21 - Viewing the inputs

State

Current state of Digital Input:

- 0 / OFF / “open”
- 1 / ON / “closed”

S0 counter

Number of S0 impulses detected on this one Digital Input.

Each one ON impulse have to be min 30ms long followed by min 30ms OFF state. It means max 16 impulses per second.

5.2.2 Inputs - General

Click the picture of the input to open detailed settings.

The  **General** tab configures basic parameters of the input.

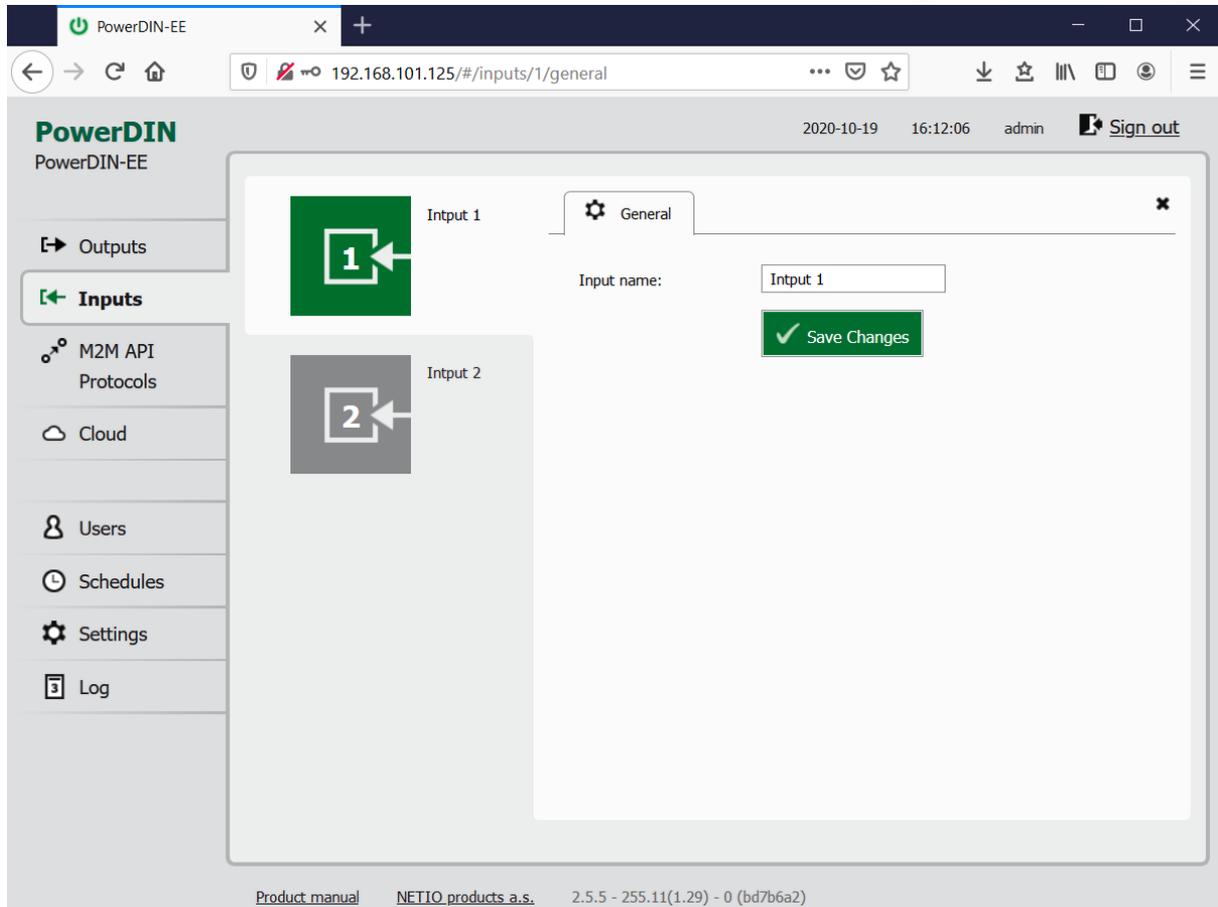


Figure 22 - General input configuration

The Digital **Input name** can be set to identify specific digital input.

Click **Save Changes** to save the settings.

To close the configuration dialog, click the  symbol in the top right corner.

5.3 M2M API Protocols

All M2M protocols use the same values for the **action** parameter to control the output. Allowed values are:

- 0 - turns the output off
- 1 - turns the output on
- 2 - short OFF - turns the output off for a short¹ time (if the output was off, it will be turned on)
- 3 - short ON - turns the output on for a short² time (if the output was on, it will be turned off)
- 4 - toggle - toggles the current output state
- 5 - no operation - leaves the output unchanged
- 6 - ignore - ignores the action attribute and only respects the state attribute - only for XML and JSON

Only one M2M protocol can be active at any time!

^{1,2} The short-off/short-on duration can be also specified in the command issued over the respective M2M protocol. If unspecified, the “Short ON/OFF delay” value is used.

5.3.1 M2M API Protocol - XML (REST M2M API)

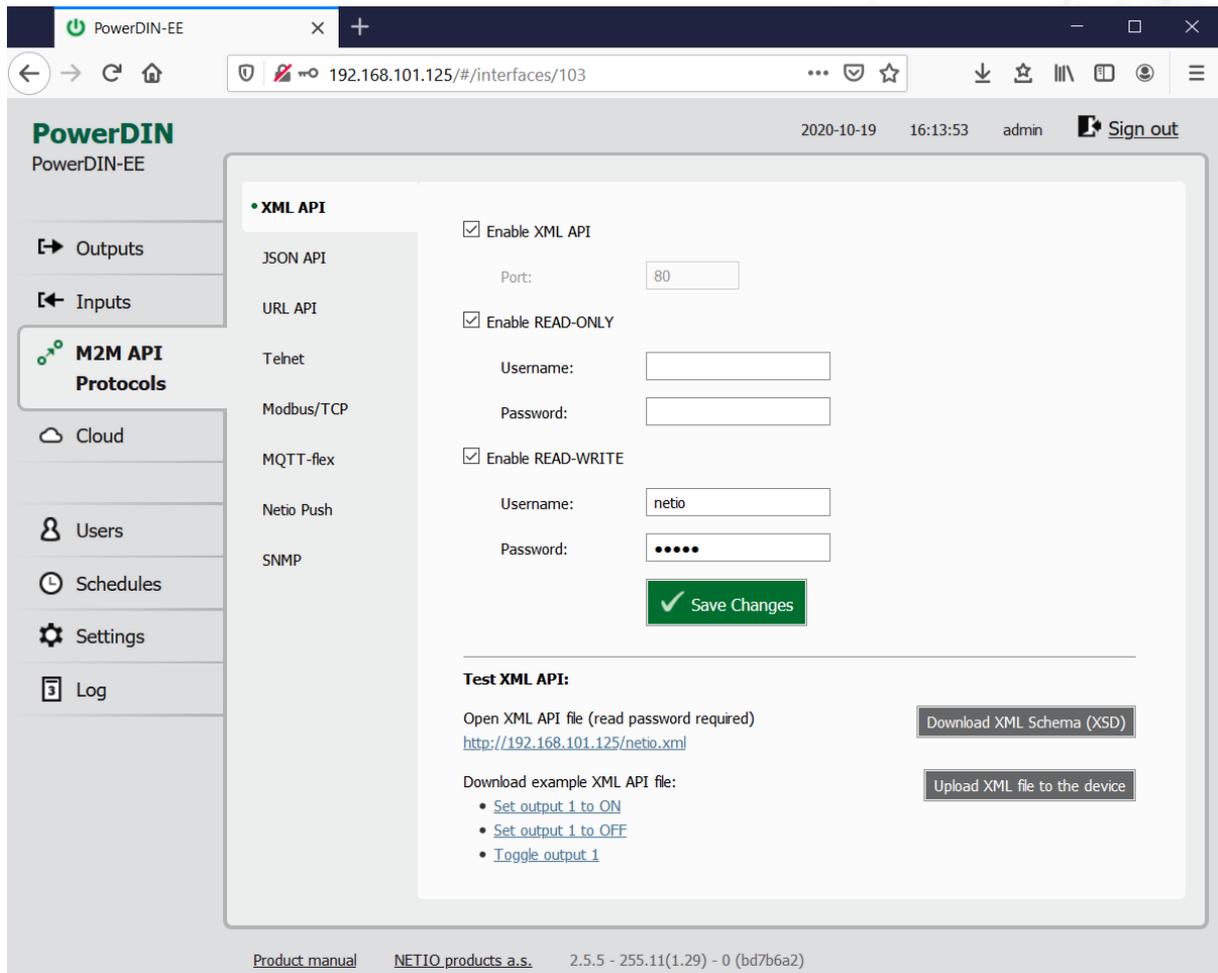


Figure 23 - XML API protocol configuration

Enable XML API	Enables M2M XML API functions in the system kernel.
Port	Read-only value. Indicates the port where the device currently listens for M2M XML API commands. This port is the same for all http based M2M API protocols and web administration and can be changed in Settings / System (chapter System).
Enable READ-ONLY	Enables Read-Only access via M2M XML API for monitoring. You may also fill in the username and password for this mode.
Enable READ-WRITE	Enables Read/Write access for monitoring (reading values) and writing (output control). You may also fill in the username and password for this mode.
Username	Username for the respective access mode (Read-Only/ReadWrite). Note - this is unrelated to the username for accessing the NETIO 4x web administration interface. When left empty, the protocol will not require any authentication.
Password	Password for the corresponding username (Read-Only/ReadWrite).
Save Changes	Saves the changes.

When the XML API is enabled, other M2M protocols are disabled. After clicking **Save changes**, you will be asked to confirm the deactivation of the other protocols.

Enabling XML API will disable all other protocols. Continue?



Click **Confirm** to confirm the action or **Cancel** to return to the XML API protocol configuration.

For an example of reading the output state using XML API, click the “**Test XML API - Open XML API file (read password required)**” link.

After entering the username and password, you will receive an xml file with the NETIO device current state.

URL for downloading/uploading the netio.xml file: <http://<NETIO Device IP>/netio.xml>
e.g. <http://192.168.101.125/netio.xml>

Example of the netio.xml file

```
<?xml version="1.0" encoding="utf-8"?>
<set:Root xmlns:set="http://www.netio-
products.com/XMLSchema/NETIO.xsd">
  <Agent>
    <Model>4PZ</Model>
    <DeviceName>PowerDIN-EE</DeviceName>
    <OemID>400</OemID>
    <VendorID>0</VendorID>
    <Version>2.5.5</Version>
    <XmlVer>2.3</XmlVer>
    <SerialNumber>24A42C38E9EE</SerialNumber>
    <MAC>24:A4:2C:38:E9:EE</MAC>
    <Uptime>11110</Uptime>
    <Time>2020-10-19T16:59:26+01:00</Time>
    <NumOutputs>4</NumOutputs>
    <NumInputs>2</NumInputs>
  </Agent>
  <GlobalMeasure>
    <Voltage>238</Voltage>
    <Frequency>50.00</Frequency>
    <TotalCurrent>67</TotalCurrent>
    <TotalLoad>10</TotalLoad>
    <TotalEnergy>36</TotalEnergy>
    <OverallPowerFactor>0.60</OverallPowerFactor>
    <OverallPhase>-37.57</OverallPhase>
  </GlobalMeasure>
  <Outputs>
    <Output>
      <ID>1</ID>
      <Name>Power output 1</Name>
```

```

<State>1</State>
<Action>6</Action>
<Delay>2020</Delay>
<PowerFactor>0.60</PowerFactor>
<Phase>-37.57</Phase>
<Load>10</Load>
<Current>67</Current>
<Energy>9</Energy>
<ReverseEnergy>0</ReverseEnergy>
</Output>
<Output>
<ID>2</ID>
<Name>Power output 2</Name>
<State>0</State>
<Action>6</Action>
<Delay>2020</Delay>
<PowerFactor>1.00</PowerFactor>
<Phase>0.00</Phase>
<Load>0</Load>
<Current>0</Current>
<Energy>27</Energy>
<ReverseEnergy>0</ReverseEnergy>
</Output>
<Output>
<ID>3</ID>
<Name>Free Contact 3</Name>
<State>0</State>
<Action>6</Action>
<Delay>2020</Delay>
</Output>
<Output>
<ID>4</ID>
<Name>Free Contact 4</Name>
<State>1</State>
<Action>6</Action>
<Delay>2020</Delay>
</Output>
</Outputs>
<Inputs>
<Input>
<ID>1</ID>
<Name>Input 1</Name>
<State>1</State>
<S0Counter>28</S0Counter>
</Input>
<Input>
<ID>2</ID>
<Name>Input 2</Name>
<State>0</State>
<S0Counter>30</S0Counter>
</Input>
</Inputs>
</set:Root>

```

The following example XML files for controlling the device can be downloaded directly from the web administration:

- Set output 1 to ON
- Set output 1 to OFF
- Toggle output 1

Click **Download XML Schema (XSD)** to download the .xsd schema file.

The **Upload XML file to the device** button opens the following dialog for testing:

HTTP(s) file upload ×

Host:

Port: Method: **HTTP POST**

Username: Password:

Request #1 (e.g. set-output1-to-1.xml)
 No file selected

Request #2 (e.g. set-output1-to-0.xml)
 No file selected

Request #3 (e.g. toggle-output1.xml)
 No file selected

Response

Host - URL of the .xml file.

Port - port number used by the XML API protocol.

Username and Password - Username and password configured for the XML API protocol in the READ-WRITE section.

Request #1,2,3 – select .xml file(s) with commands to perform.

Send file - send the selected file(s).


Response - response to the submitted command.

Close - closes the dialog window.

Figure 24 - Upload XML file dialog


For the specifications of the M2M XML API protocol, visit the **Support > Download** section of our website and see the following document:

[XML - description of NETIO M2M API interface - PDF](#)

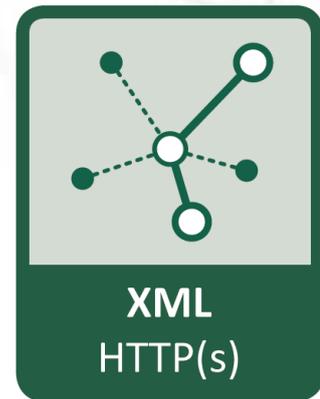

For more information and a practical demonstration of using the XML protocol with NETIO smart sockets, see the following Application Note:

[AN20 XML HTTP\(s\) protocol to control NETIO smart power sockets 110/230V](#)

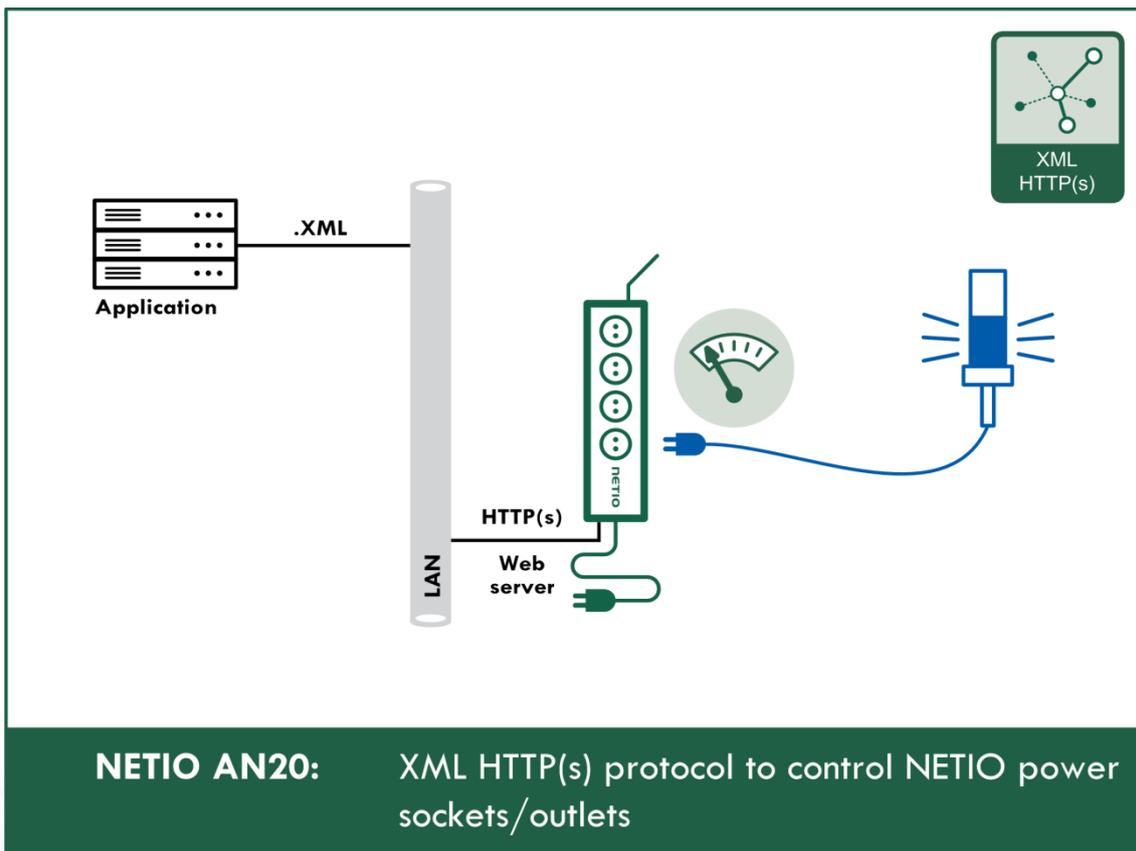

5.3.2 M2M API Protocol - JSON (REST M2M API)

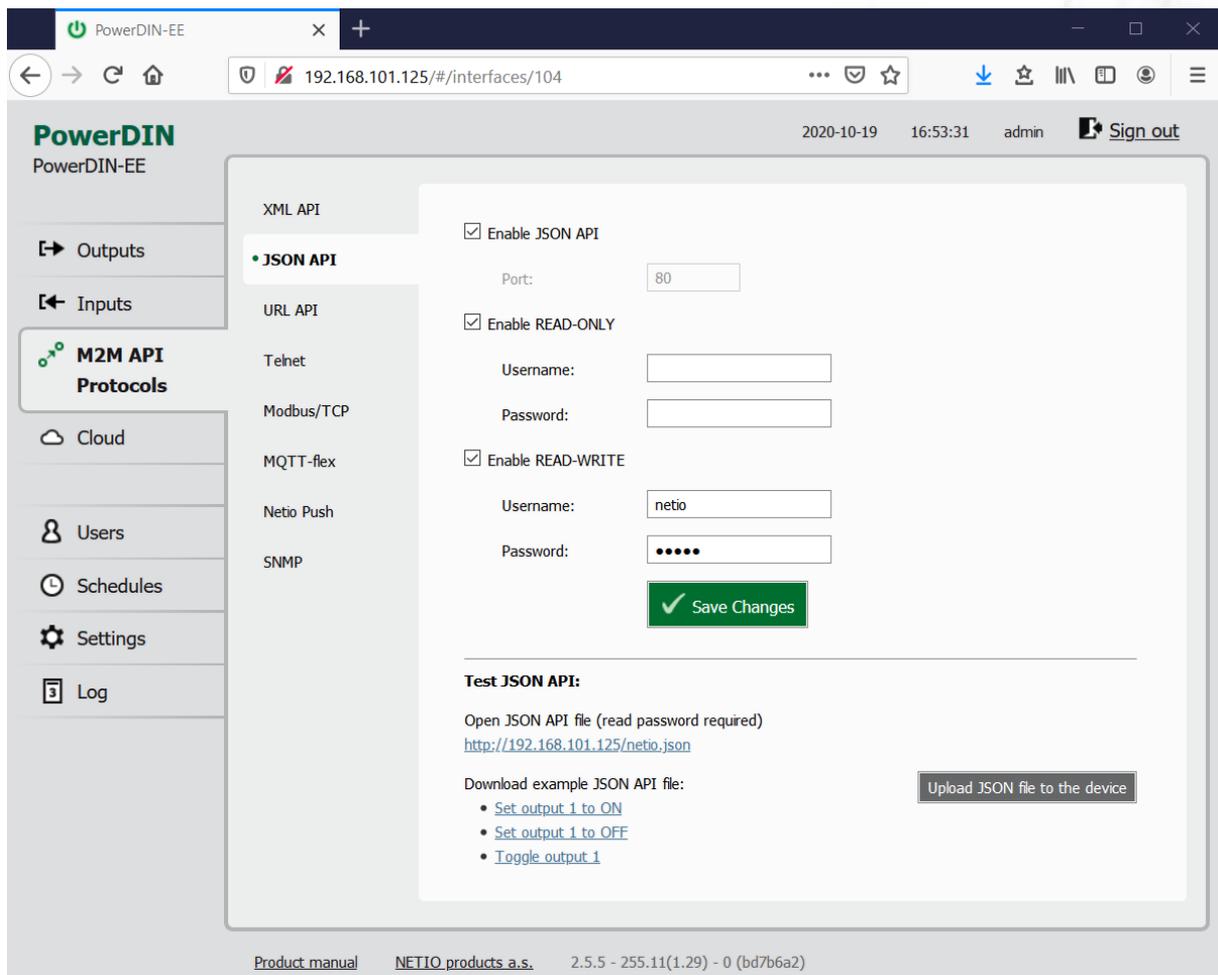


Figure 25 - JSON API protocol configuration

Enable JSON API	Enables M2M JSON API functions in the system kernel.
Port	Read-only value. Indicates the port where the device currently listens for M2M JSON API commands. This port is the same for all http based M2M API protocols and web administration and can be changed in Settings / System (chapter System).
Enable READ-ONLY	Enables Read-Only access via M2M JSON API for monitoring. You may also fill in the username and password for this mode.
Enable READ-WRITE	Enables Read/Write access for monitoring and output control. You may also fill in the username and password for this mode.
Username	Username for the respective access mode (Read-Only/ReadWrite). Note - this is unrelated to the username for accessing the NETIO device web administration. When left empty, the protocol will not require any authentication.
Password	Password for the corresponding username (Read-Only/ReadWrite).
Save Changes	Saves the changes.

When the JSON API protocol is enabled, other M2M protocols are disabled. After clicking **Save changes**, you will be asked to confirm the deactivation of the other protocols.

Enabling JSON API will disable all other protocols. Continue?



Click **Confirm** to confirm the action or **Cancel** to return to the JSON API protocol configuration.

For an example of reading the output state using JSON API, click the “**Test JSON API: Open JSON API file (read password required)**” link.

After entering the username and password, you will receive a json file with the NETIO device current state.

URL for downloading/uploading the netio.json file: **http://<NETIO Device IP>/netio.json**
e.g. <http://192.168.101.125/netio.json>

Example of the netio.json file

```
{
  "Agent": {"Model": "4PZ", "DeviceName": "PowerDIN-EE", "MAC": "24:A4:2C:38:E9:EE", "SerialNumber": "24A42C38E9EE", "JSONVersion": "2.3", "Time": "2020-10-19T16:58:40+01:00", "Uptime": 11064, "Version": "2.5.5", "OemID": 400, "VendorID": 0, "NumOutputs": 4, "NumInputs": 2},
  "GlobalMeasure": {"Voltage": 238, "TotalCurrent": 82, "TotalLoad": 12, "TotalEnergy": 36, "OverallPowerFactor": 0.59, "Frequency": 50.05, "Phase": -37.28, "EnergyStart": "2020-06-30T17:04:48+01:00"},
  "Outputs": [
    {"ID": 1, "Name": "Power output 1", "State": 1, "Action": 6, "Delay": 2020, "Current": 82, "PowerFactor": 0.59, "Phase": -37.28, "Energy": 8, "ReverseEnergy": 0, "Load": 12},
    {"ID": 2, "Name": "Power output 2", "State": 0, "Action": 6, "Delay": 2020, "Current": 0, "PowerFactor": 1.00, "Phase": 0.00, "Energy": 27, "ReverseEnergy": 0, "Load": 0},
    {"ID": 3, "Name": "Free Contact 3", "State": 0, "Action": 6, "Delay": 2020},
    {"ID": 4, "Name": "Free Contact 4", "State": 1, "Action": 6, "Delay": 2020}
  ],
  "Inputs": [
    {"ID": 1, "Name": "Input 1", "State": 1, "S0Counter": 28},
```

```
{ "ID":2, "Name": "Input 2", "State":0, "S0Counter":30 }
}
```

The following example json files for controlling the device can be downloaded directly from the web administration:

- Set output 1 to ON
- Set output 1 to OFF
- Toggle output 1

The **Upload JSON file to the device** button opens the following dialog for testing:

HTTP(s) file upload

Host:

Port: Method: **HTTP** POST

Username: Password:

Request #1 (e.g. set-output1-to-1.json)
 No file selected

Request #2 (e.g. set-output1-to-0.json)
 No file selected

Request #3 (e.g. toggle-output1.json)
 No file selected

Response

Host - URL of the .json file.

Port - port number used by the JSON protocol.

Username and Password - username and password configured for the JSON protocol in the READ-WRITE section.

Request #1,2,3 – select .json file(s) with commands to perform.

Send file - send the selected file(s).


Response - response to the submitted command.

Close - closes the dialog window.

Figure 26 - Upload JSON file dialog


For more information about the M2M JSON API, visit the **Support > Download** section of our website and see the following document:

[JSON - description of NETIO M2M API interface - PDF](#)

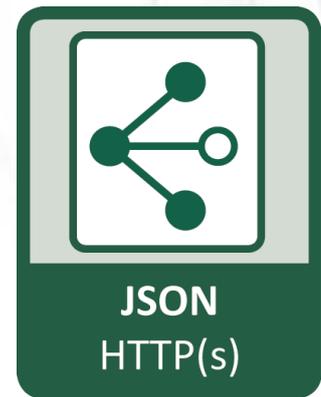

For more information and a practical demonstration of using the JSON protocol with NETIO smart sockets, see the following Application Note:

[AN21 JSON HTTP\(S\) protocol to control NETIO 110/230V power sockets \(3x REST API\)](#)

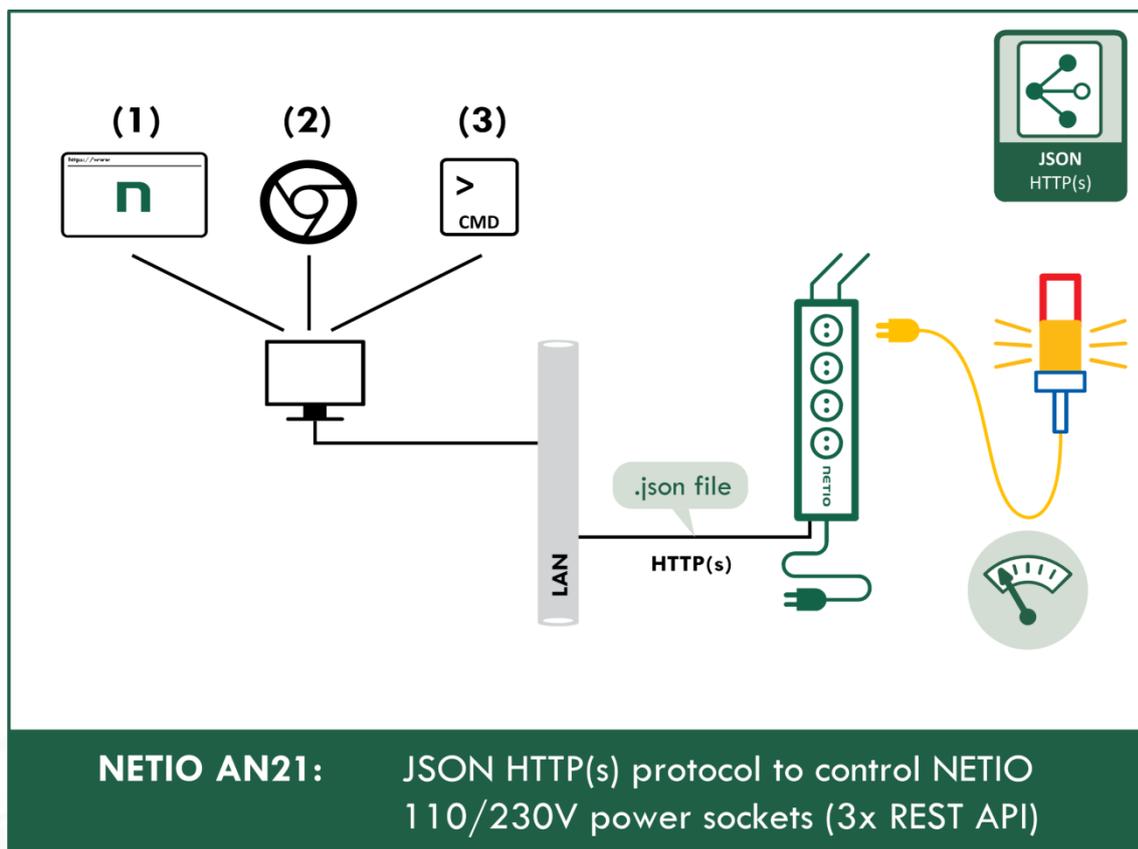

5.3.3 M2M API Protocol - URL-API (REST M2M API)

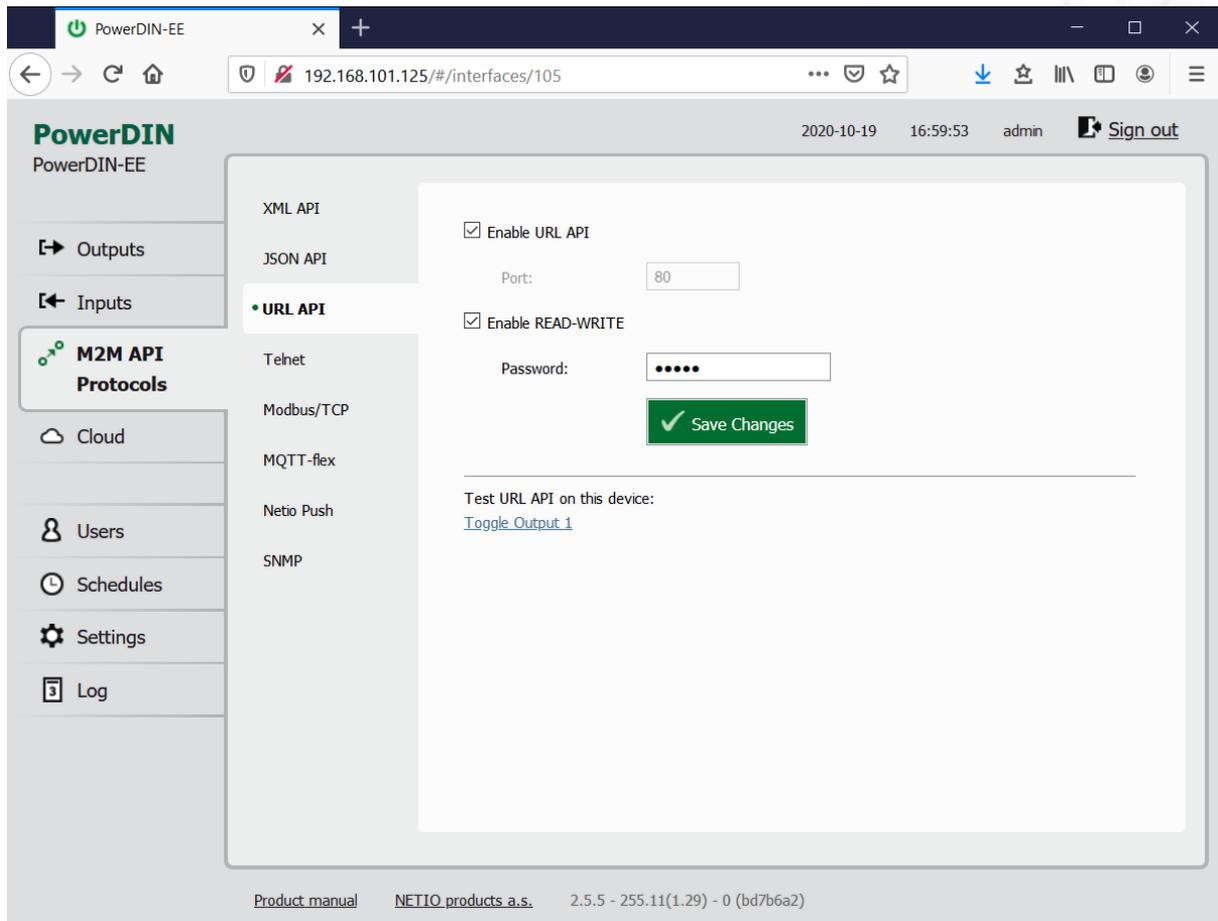


Figure 27 -URL API protocol configuration

Enable URL API	Enables M2M URL API functions in the system kernel.
Port	Read-only value. Indicates the port where the device currently listens for M2M URL API commands. This port is the same for all http based M2M API protocols and web administration and can be changed in Settings / System (chapter System).
Enable READ-WRITE	Enables READ-WRITE access.
Password	Password to authenticate HTTP GET communication (pass attribute in the request).
Save Changes	Saves the changes.

When the URL API is enabled, other M2M protocols are disabled. After clicking **Save changes**, you will be asked to confirm the deactivation of the other protocols.

Enabling URL API will disable all other protocols. Continue?

Confirm

Cancel

Click **Confirm** to confirm the action or **Cancel** to return to the URL API protocol configuration.

For an example of toggling output no. 1 using the M2M URL API, click the link under **Test URL API**.

This opens a new browser tab and invokes the following HTTP GET request:

`http://<NETIO Device IP>/netio.cgi?pass=<Password>&output1=4`

e.g. `http://192.168.101.125/netio.cgi?pass=netio&output1=4`


For more information about the M2M URL API, visit the **Support > Download** section of our website and see the following document:

[URL API - description of NETIO M2M API interface - PDF](#)



For more information and a practical demonstration of using the URL-API protocol with NETIO smart sockets, see the following Application Note:

AN19 URL API (http GET) protocol to control NETIO 4x power sockets/outlets 110 / 230V

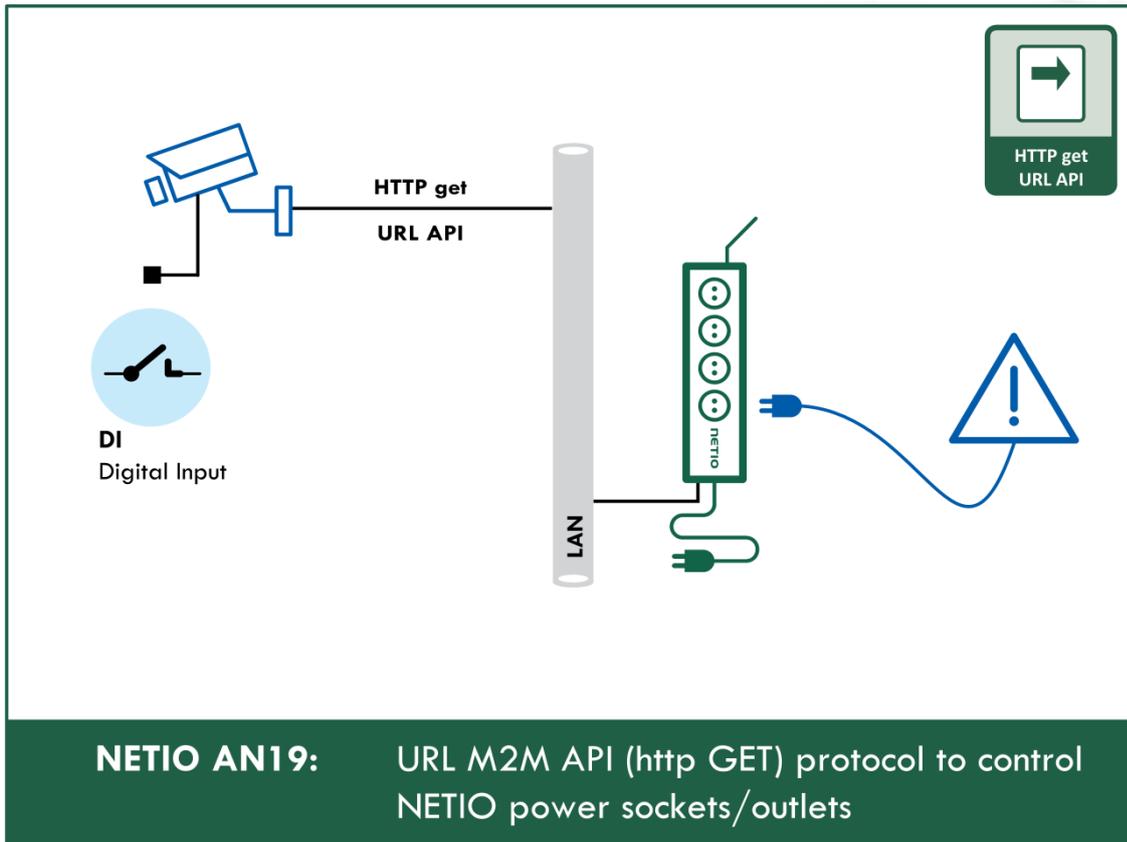

5.3.4 M2M API Protocol - Telnet

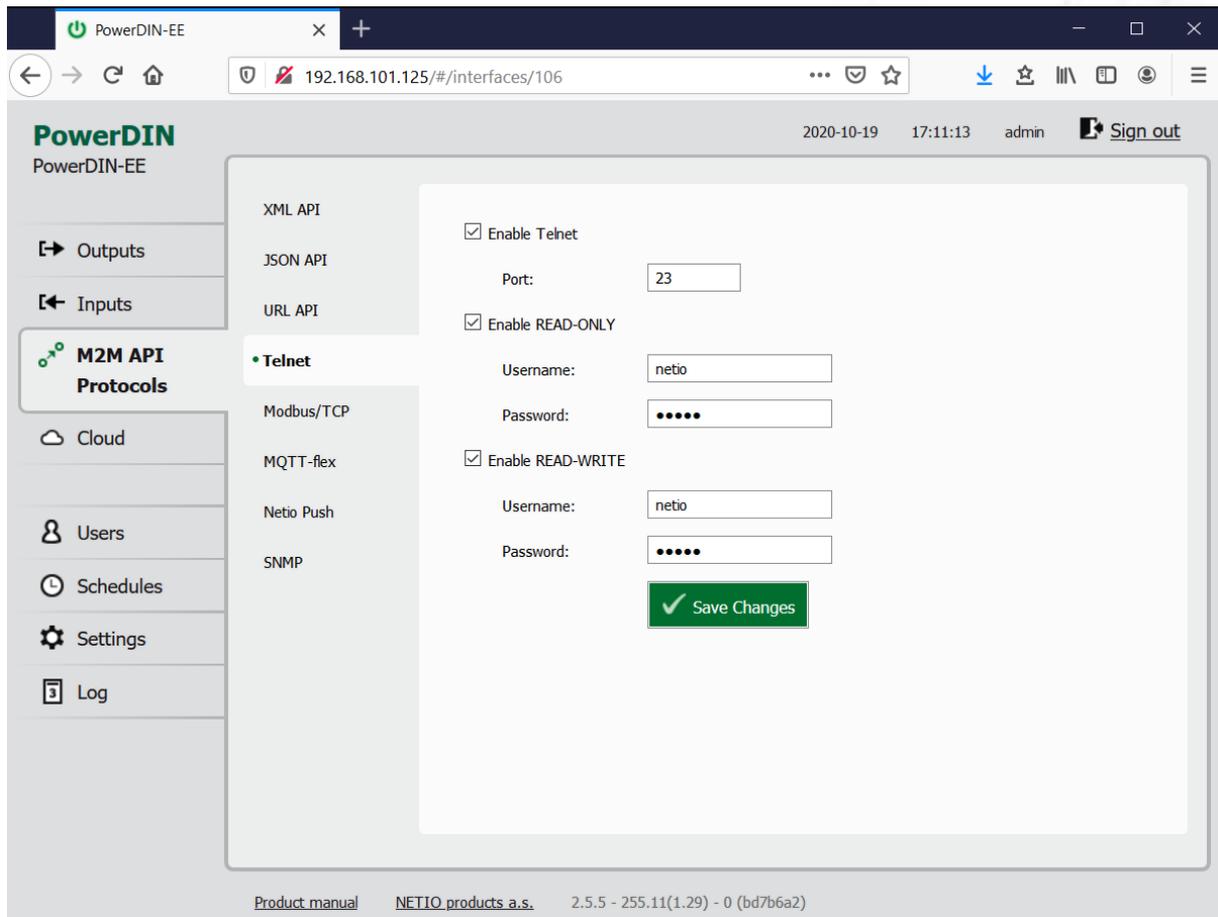


Figure 28 -Telnet protocol configuration

Enable Telnet	Enables M2M Telnet functions in the system kernel.
Port	Specific port for Telnet only, range 1 - 65535. Be aware, that you should enter value, which is not already occupied by another M2M protocol or web interface.
Enable READ-ONLY	Enables Read-Only access via M2M Telnet API for monitoring. You may also fill in the username and password for this mode.
Enable READ-WRITE	Enables Read/Write access for monitoring and output control. You may also fill in the username and password for this mode.
Username	Username for the respective access mode (Read-Only/ReadWrite). Note - this is unrelated to the username for accessing the NETIO device web administration. When left empty, the protocol will not require any authentication.
Password	Password for the corresponding username (Read-Only/ReadWrite).
Save Changes	Saves the changes.

Start Telnet connection to a NETIO device IP address and its Telnet port

When the connection is established, the NETIO device returns the following response and is ready to receive commands.

Telnet welcome message

```
100 HELLO 489F6C4F - KSHHELL V2.1
```

Note: The Telnet connection is automatically terminated after 60 seconds of inactivity. It is possible to use the *noop* command to keep the connection alive for the next 60 seconds.

Command set

Command	Description
login <username> <password>	Log in a user. Replace <username> and <password> by the equivalent attributes defined in the Telnet protocol configuration (Figure 28) <password> Example - log in with username <i>netio</i> and password <i>netio</i>: login netio netio
quit	Log out and terminate Telnet connection.
noop	Keep the Telnet connection alive for the next 60 seconds. No-operation
port list [xxxx]	Control/monitor of all outputs based on the parameters xxxx (described below) for each output. All parameters x must have valid value otherwise the command will not be accepted (e.g. port list 10x1 is invalid). If no parameters are provided, then it returns states of all outputs. Outputs are numbered from the left to right (1-2-3-4). Control all outputs (1 and 4: ON, 2 and 3: OFF): port list 1001 250 OK Returns state of output: port list 250 1001 (<i>outputs 1 and 4 are ON, 2 and 3 OFF</i>)
port <output> <action>	Control the output. <output> is replaced by the output number (1)

	<p><action> is replaced by a parameter described below If no <action> is provided, the state of the output is returned.</p>
input list	<p>Returns state of input. <pre>input list 250 10</pre> <input is="" on)<="" p=""/> </p>

Each command must be followed by CR and LF characters (hexadecimal 0D and 0A). Typically, you can use Enter in the terminal.

Parameters <action> for *port* command

Parameter	Action
0	Turn OFF
1	Turn OFF
2	Short OFF delay (restart)
3	Short ON delay
4	Toggle (invert the state)
5	No change

Command examples

Switch power output 1 to ON:

```
port 1 1
```

Switch power output 1 to OFF:

```
port 1 0
```

Toggle power output 1:

```
port 1 4
```

Status codes

Status code	Description
110 BYE	Connection terminated by client after command quit
130 CONNECTION TIMEOUT	No command submitted for longer than 60 seconds. The Telnet connection is terminated.
250 OK	The command is accepted.
500 INVALID VALUE	The command parameter is not valid.
501 INVALID PARAMETR	The command parameter is not valid.
502 UNKNOWN COMMAND	The command is not valid.
505 FORBIDDEN	An attempt to make an action with not sufficient permission (i.e.: control output with read only user, try to monitor output state with non-logged user, where ReadOnly user is password protected etc.)
510 OUT OF RANGE	Specified value is not valid (i.e. trying to control port 4 on device, which has only 1 socket)


For more information about the Telnet protocol, visit the **Support > Download** section of our website and see the following document:

[Telnet - description of NETIO M2M API interface - PDF](#)



For more information and a practical demonstration of using the Modbus/TCP protocol with NETIO smart sockets, see the following Application Note:

[AN10 Telnet control of electrical power sockets \(M2M API - KSHELL\)](#)

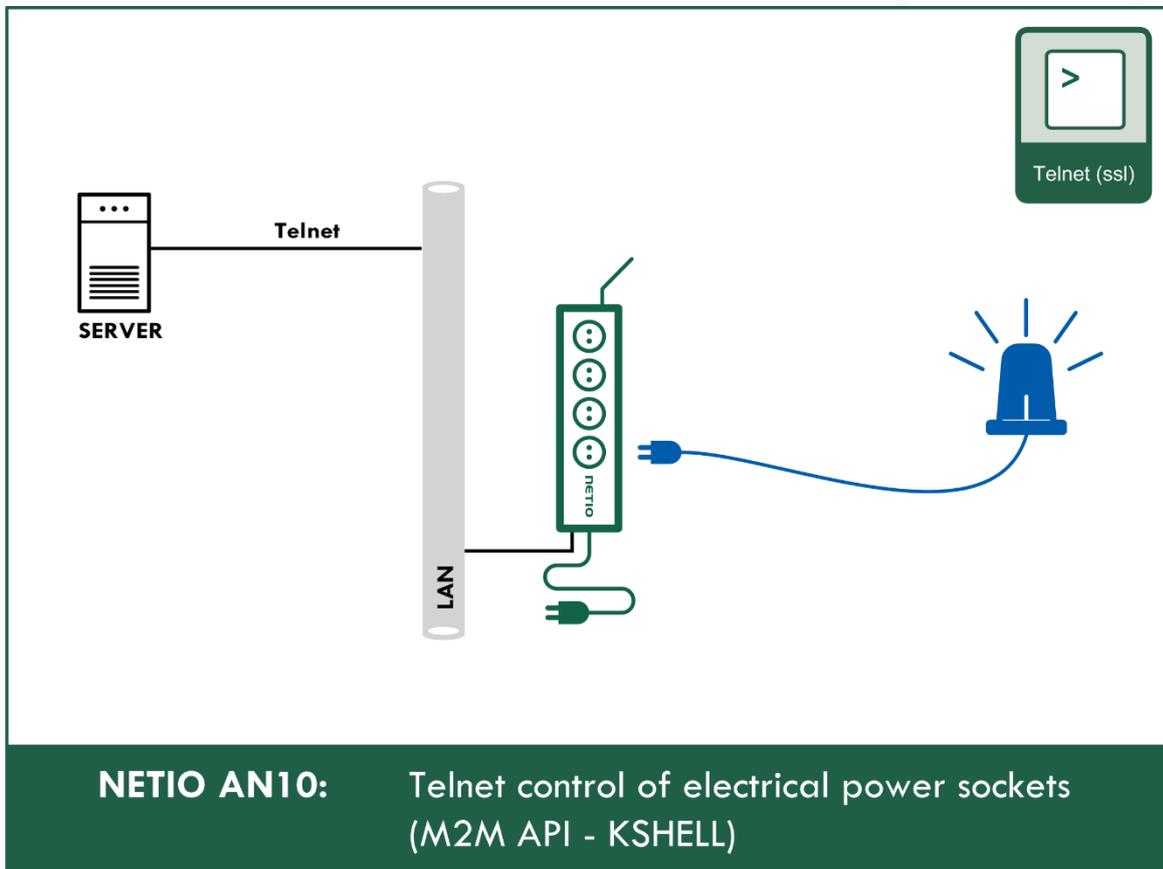

5.3.5 M2M API Protocol - Modbus/TCP

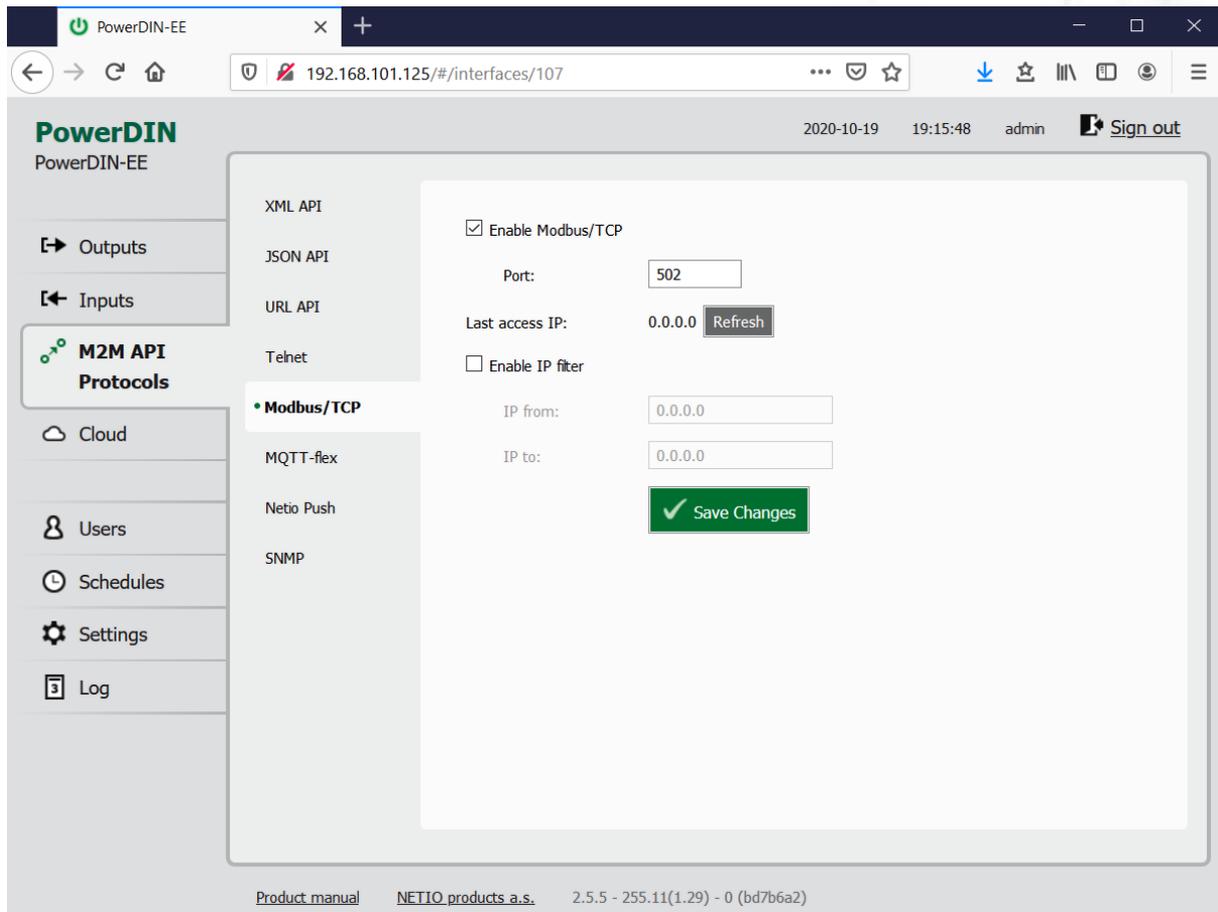


Figure 29 - Modbus/TCP protocol configuration

Enable Modbus/TCP

Enables M2M Modbus/TCP functions in the system kernel.

Port

Specific port for Modbus/TCP only, range 1 - 65535. The device do **NOT** alerts you if you specify a port number that is already occupied.

Last access IP

Read-only value indicating the IP address from which the last Modbus/TCP command was received. The “Refresh” button updates this value.

Enable IP filter

To improve security, the IP filter can be used to specify a range of IP addresses from which Modbus/TCP commands are accepted. Commands from addresses outside of this range will be ignored.

Save Changes


Saves the changes.

Function	Register	Value	Description
0x01	102 (101)	0/1	Read 1st output state (101 when Wire address used)
0x01	103	0/1	Read 2nd output state
0x01	104	0/1	Read 3rd output state
0x01	105	0/1	Read 4th output state
0x02	802	0/1	Read 1st input state
0x02	803	0/1	Read 2nd input state
0x03	1	uInt16	Number of digital inputs
0x03	2	uInt16	Number of digital outputs
0x03	3	uInt16	Number of metered digital outputs
0x03	102	uInt16	1st output state
0x03	103	uInt16	2nd output state
0x03	104	uInt16	3rd output state
0x03	105	uInt16	4th output state
0x03	202	uInt16	"Short" delay of 1st output [s*10]
0x03	203	uInt16	"Short" delay of 2nd output [s*10]
0x03	204	uInt16	"Short" delay of 3rd output [s*10]
0x03	205	uInt16	"Short" delay of 4th output [s*10]
0x03	802	uInt16	1st input state
0x03	803	uInt16	2nd input state
0x04	1	uInt16	Power grid frequency [Hz*100]
0x04	2	uInt16	Voltage [V*10] - RMS
0x04	3	uInt16	OverAll TruePowerFactor * 1000
0x04	4	uInt16	All outputs current [mA] (double)
0x04	5	uInt16	All outputs power [W] (double)
0x04	6	Int16	All outputs Phase shift [° *100] (double)
0x04	101	uInt16	All outputs current [mA]
0x04	102	uInt16	1st output current [mA]
0x04	103	uInt16	2nd output current [mA]
0x04	201	uInt16	All outputs power [W]
0x04	202	uInt16	1st output power [W]
0x04	203	uInt16	2nd output power [W]
0x04	301	uInt16	All outputs energy counter - 2 upper bytes [Wh]
0x04	302	uInt16	All outputs energy counter - 2 lower bytes [Wh]
0x04	303	uInt16	1st output energy counter - 2 upper bytes [Wh]
0x04	304	uInt16	1st output energy counter - 2 lower bytes [Wh]
0x04	305	uInt16	2nd output energy counter - 2 upper bytes [Wh]
0x04	306	uInt16	2nd output energy counter - 2 lower bytes [Wh]
0x04	401	uInt16	All outputs TPF [-]
0x04	402	uInt16	1st output TPF [-]
0x04	403	uInt16	2nd output TPF [-]
0x04	501	Int16	All outputs Phase shift [° *100]
0x04	502	Int16	1st output Phase shift [° *100]
0x04	503	Int16	2nd output Phase shift [° *100]

0x04	803	uInt16	1st digital input S0 counter - 2 upper bytes
0x04	804	uInt16	1st digital input S0 counter - 2 lower bytes
0x04	805	uInt16	2nd digital input S0 counter - 2 upper bytes
0x04	806	uInt16	2nd digital input S0 counter - 2 lower bytes
0x05	102	0/1	Turn On/Off 1st output (Write)
0x05	103	0/1	Turn On/Off 2nd output
0x05	104	0/1	Turn On/Off 3rd output
0x05	105	0/1	Turn On/Off 4th output
0x06	102	uInt16	Set action to 1st output
0x06	103	uInt16	Set action to 2nd output
0x06	104	uInt16	Set action to 3rd output
0x06	105	uInt16	Set action to 4th output
0x06	202	uInt16	Set "Short" delay of 1st output [s*10]
0x06	203	uInt16	Set "Short" delay of 2nd output [s*10]
0x06	204	uInt16	Set "Short" delay of 3rd output [s*10]
0x06	205	uInt16	Set "Short" delay of 4th output [s*10]


For more information about the M2M Modbus/TCP protocol, visit the **Support > Download** section of our website and see the following document:

[Modbus / TCP - description of NETIO M2M API interface - PDF](#)

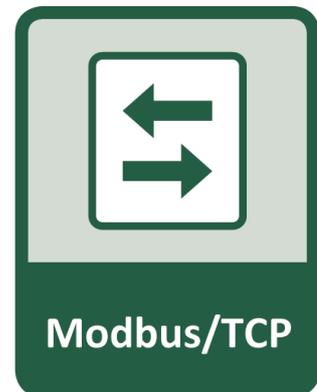

For more information and a practical demonstration of using the Modbus/TCP protocol with NETIO smart sockets, see the following Application Note:

[AN27: Modbus/TCP with NETIO 4x - Control and measure LAN power sockets](#)

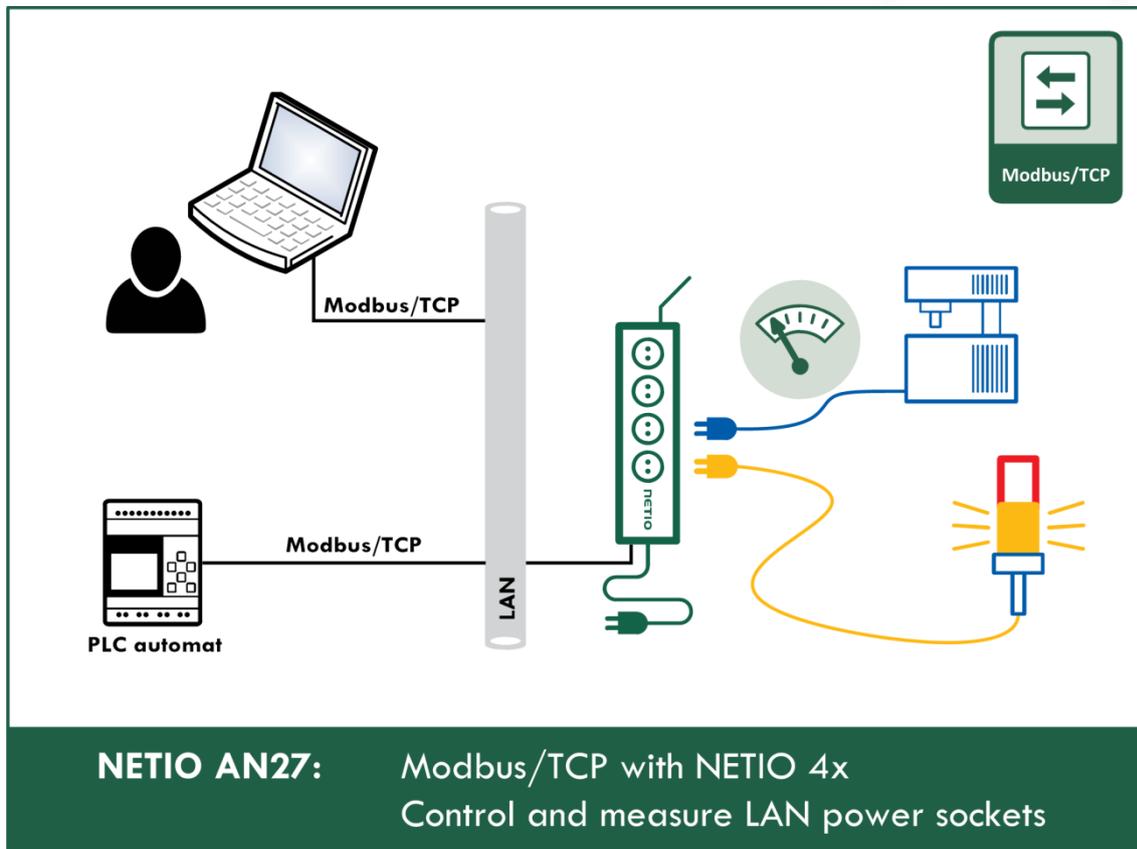

5.3.6 M2M API Protocol - MQTT-flex

The screenshot shows the PowerDIN-EE web interface. The browser address bar displays '192.168.101.125/#/interfaces/108'. The page title is 'PowerDIN-EE' and the user is logged in as 'admin'. The left sidebar contains navigation options: Outputs, Inputs, M2M API Protocols (selected), Cloud, Users, Schedules, Settings, and Log. The main content area shows the MQTT-flex configuration page. It includes a checkbox for 'Enable MQTT-flex' which is checked. Below it is a text area for the MQTT-flex configuration (max 6000 characters) containing the following JSON:

```

1 {
2   "broker": {
3     "clientid": "netio${DEVICE_SN}",
4     "keepalive": 30,
5     "password": "",
6     "port": 1883,
7     "protocol": "mqtt",
8     "ssl": false,
9     "type": "generic",
10    "url": "broker.hivemq.com",
11    "username": ""
12  },
13  "publish": [
14    {
15      "events": [
16        {
17          "source": "OUTPUTS/1/STATE",
18          "type": "change"
19        },
20        {
21          "source": "OUTPUTS/2/STATE",

```

At the bottom of the configuration area is a green 'Save Changes' button. Below the configuration area is a link for 'MQTT-flex - Online Configuration Manual'. The footer of the page contains the text: 'Product manual NETIO products a.s. 2.5.5 - 255.11(1.29) - 0 (bd7b6a2)'.

Figure 30 - MQTT-flex protocol configuration

Enable MQTT-flex

Enables MQTT-flex functions in the system kernel.

MQTT-flex Config:

Text area for entering the MQTT-flex configuration.

Save Changes

Saves the changes.

NETIO device uses json to define the MQTT-flex structure (MQTT-flex Config). Both subscribe and publish topics can be defined. Publish topics may include actions that initiate a transmission.

MQTT-flex configuration example:

```
{
  "broker": {
    "clientid": "netio${DEVICE_SN}",
    "keepalive": 30,
    "password": "",
    "port": 1883,
    "protocol": "mqtt",
    "ssl": false,
    "type": "generic",
    "url": "broker.hivemq.com",
    "username": ""
  },
  "publish": [
    {
      "events": [
        {
          "source": "OUTPUTS/1/STATE",
          "type": "change"
        },
        {
          "source": "OUTPUTS/2/STATE",
          "type": "change"
        },
        {
          "source": "OUTPUTS/3/STATE",
          "type": "change"
        },
        {
          "source": "OUTPUTS/4/STATE",
          "type": "change"
        },
        {
          "delta": 200,
          "source": "OUTPUTS/1/CURRENT",
          "type": "delta"
        },
        {
          "delta": 200,
          "source": "OUTPUTS/2/CURRENT",
          "type": "delta"
        },
        {
          "source": "INPUTS/1/STATE",
          "type": "change"
        },
        {
          "source": "INPUTS/2/STATE",
          "type": "change"
        },
        {
          "delta": 250,
          "source": "INPUTS/1/S0",

```

```

        "type": "delta"
    },
    {
        "delta": 250,
        "source": "INPUTS/2/S0",
        "type": "delta"
    },
    {
        "period": 3600,
        "type": "timer"
    }
],
"payload": "${OUTPUTS_STATUS}",
"qos": 0,
"retain": false,
"topic": "devices/${DEVICE_NAME}/messages/devicebound/"
}
],
"subscribe": [
    {
        "action": "${payload}",
        "qos": 0,
        "target": "REST_JSON",
        "topic": "devices/${DEVICE_NAME}/messages/events/"
    }
]
}

```

For more information about the M2M MQTT-flex API, visit the **Support > Download** section of our website and see the following document:

[MQTT-flex - description of NETIO M2M API interface - PDF](#)


There are wide options for subscribe and publish sections and its possibilities expand over the time.

You will find details and examples at our online resource center:
<https://wiki.netio-products.com/index.php?title=MQTT-flex>



For more information and a practical demonstration of using the MQTT protocol with NETIO smart sockets, see the following Application Note:

[AN40 Getting started with PowerCable MQTT-flex via HiveMQ MQTT broker to mobile App](#)

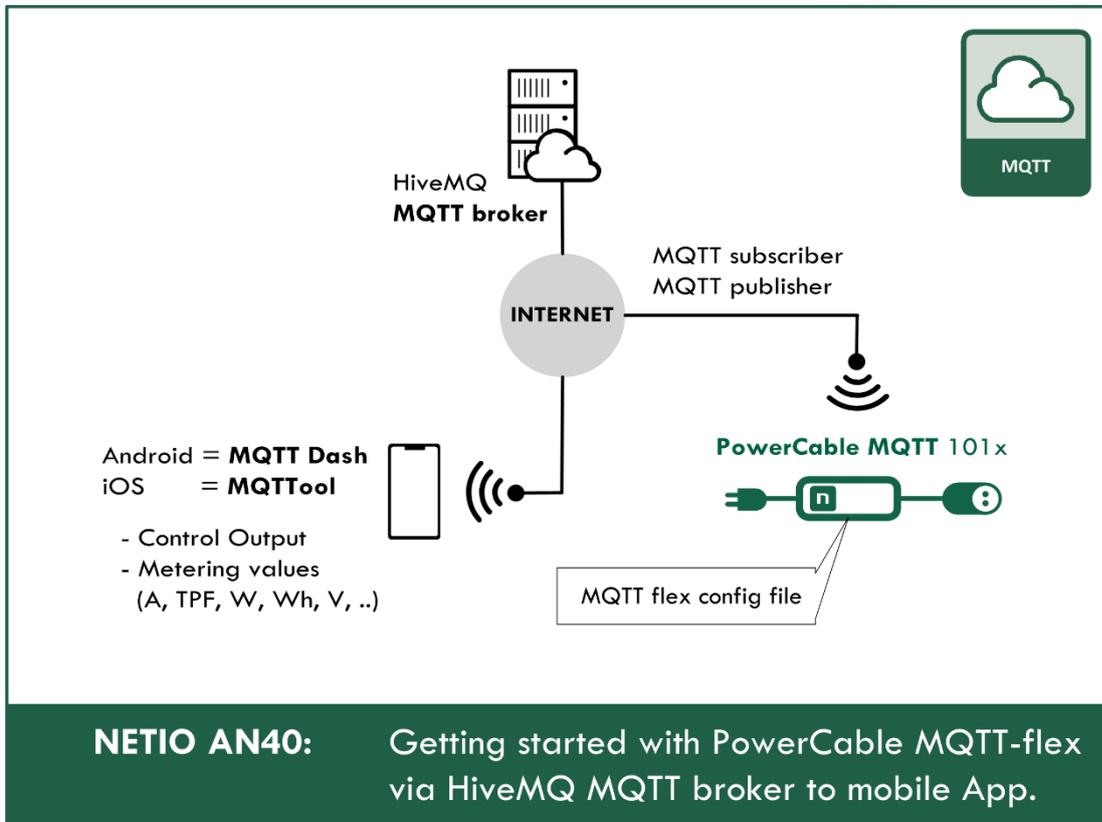

5.3.7 M2M API Protocol - Netio Push

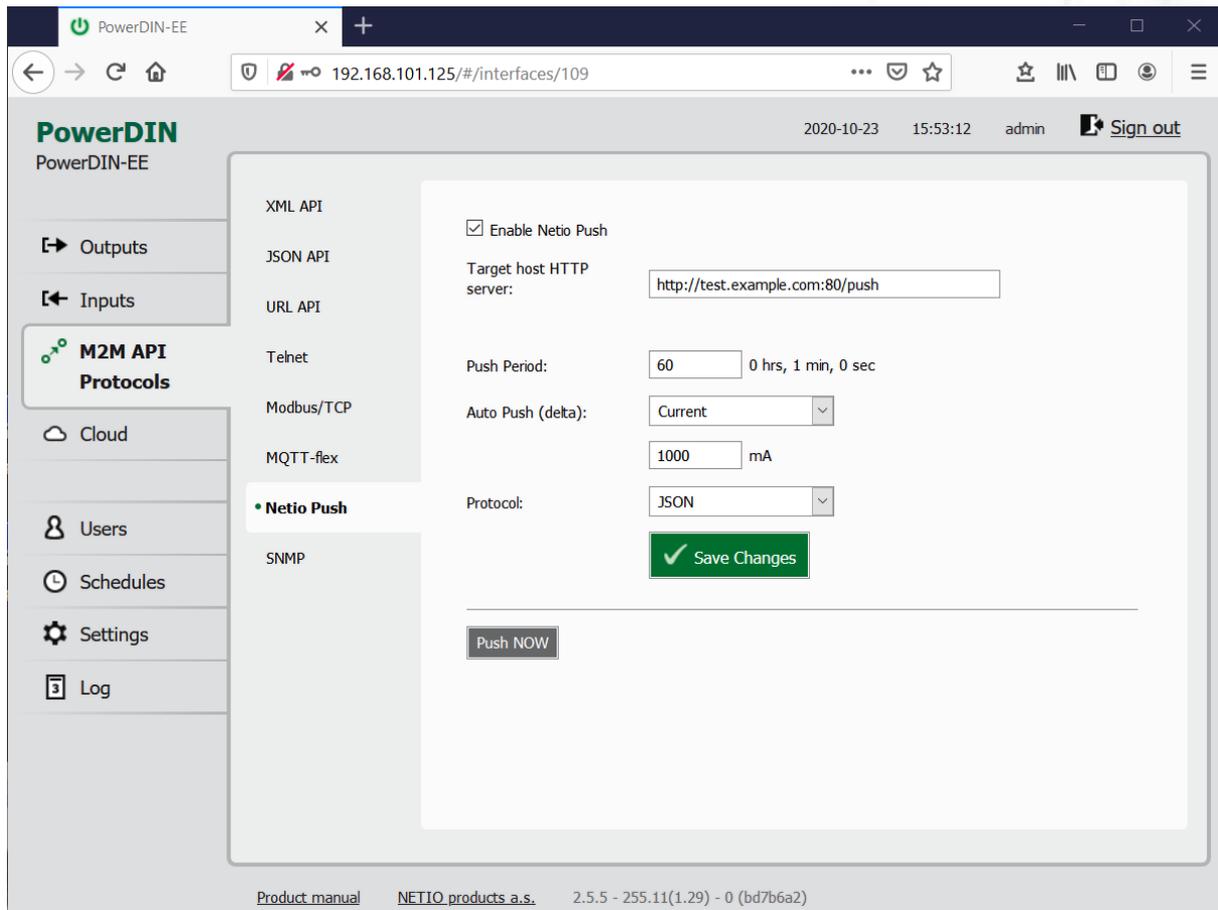


Figure 31 -Netio Push protocol configuration

Enable Netio Push

Enables Netio Push functions in the system kernel.

Target host HTTP server:

Defines the parameters of the target:

- http / https to specify the protocol
- Target URL
- Port
- Username and Password

Example: https://username:password@test.example.com:80/push

Push Period

Period for the automatic sending of data (Push), in seconds.

Auto Push (delta)

Data will be immediately sent (Push) if a measured value exceeds this limit.

Parameter - at this time, only Current

Value - limit value for the selected parameter

Protocol

Selects the payload format.

- JSON
- XML

Save Changes

Saves the changes.

Data (payload - JSON/XML) are automatically periodically sent to the target address using HTTP(s), depending on the configured push period.

Output control over the NETIO PUSH - JSON

Device is periodically connecting to the Target host http(s) server within push period (default 60seconds). It means the output can be switched only when the TCP/IP connection is established. In default once every 60 seconds.

If the response from Target host is error code 200 (OK) and the payload contains valid NETIO JSON structure with control command then the Output will be set accordingly. This way is possible to control device even if this is in private network behind NAT.

The NETIO JSON structure is described in section [M2M API Protocol - JSON \(REST M2M API\)](#).

For more information about the M2M HTTP(s) Push API, visit the **Support > Download** section of our website and see the following document:

[HTTP\(s\) Push JSON - description of NETIO M2M API interface - PDF](#)



5.3.8 M2M API Protocol - SNMP

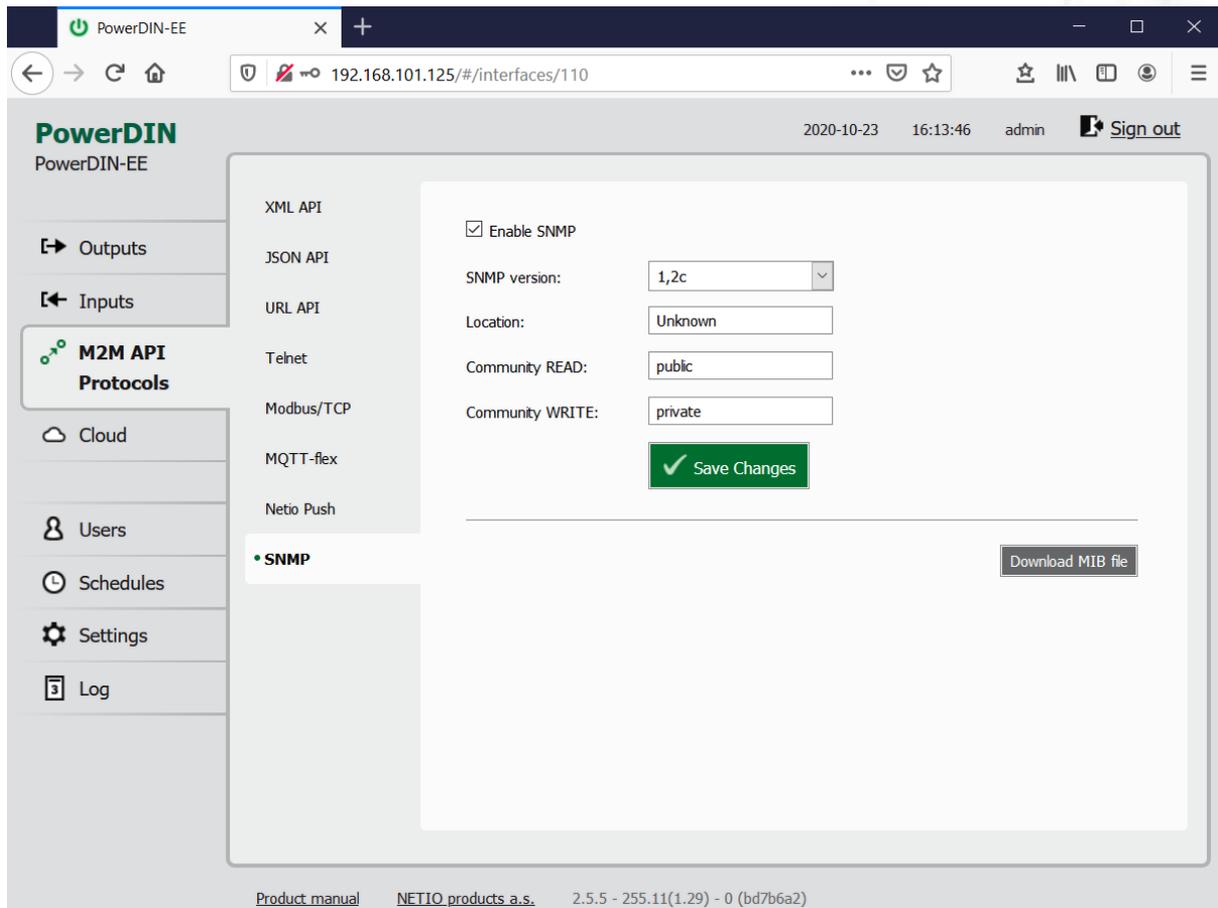


Figure 32 - SNMP API protocol configuration

Enable SNMP

Enables M2M SNMP API functions in the system kernel.

The port is 161.

SNMP version

1,2c - unsecured, unencrypted

3 - secured

Location

Define system location (sysLocation).

Community READ

Also called the “community string” in SNMP. Similar to a username/password combination. Needed for **reading** information from NETIO device over SNMP.

We recommend to use “pure” ASCII characters (that is, to avoid accented and special characters, such as @, & and so on, if possible).

Community WRITE

Also called the “community string” in SNMP. Similar to a username/password combination. Needed for **writing** commands to NETIO device over SNMP.

We recommend to use “pure” ASCII characters (that is, to avoid accented and special characters, such as @, & and so on, if possible).

Save Changes

Saves the changes.

[Download MIB file](#)

Use this button to download MIB.

When the SNMP API is enabled, other M2M protocols are disabled. After clicking **Save changes**, you will be asked to confirm the deactivation of the other protocols.

Enabling URL API will disable all other protocols. Continue?



Click **Confirm** to confirm the action or **Cancel** to return to the SNMP API protocol configuration.

The MIB can be downloaded from a device web administrator as described above.

Following standard MIBs are also required:

- SNMPv2-SMI
- SNMPv2-TC

Monitoring (read)

x = Output/Input number

Object OID	Type	Value example	Note
netioOutputID.x.0 1.3.6.1.4.1.47952.1.1.1.1.x.0	INTEGER	1	
netioOutputName.x.0 1.3.6.1.4.1.47952.1.1.1.2.x.0	STRING	output_1	Based on user defined name
netioOutputState.x.0 1.3.6.1.4.1.47952.1.1.1.3.x.0	INTEGER	off(0), on(1)	
netioOutputStateString.x.0 1.3.6.1.4.1.47952.1.1.1.4.x.0	STRING	"off", "on"	
netioOutputLoad.x.0 1.3.6.1.4.1.47952.1.1.1.25.x.0	INTEGER	24	[W]
netioOutputEnergy.x.0 1.3.6.1.4.1.47952.1.1.1.26.x.0	INTEGER	13	[Wh]
netioOutputEnergyStart.x.0 1.3.6.1.4.1.47952.1.1.1.27.x.0	DateAndTime	2017-6-23,5:47:3.0,+0:0	Initial date and time. UTC based *1
netioOutputCurrent.x.0 1.3.6.1.4.1.47952.1.1.1.28.x.0	INTEGER	195	[mA]
netioOutputPowerFactor.x.0 1.3.6.1.4.1.47952.1.1.1.29.x.0	INTEGER	534	Current power factor * 1000
netioVoltage.0 1.3.6.1.4.1.47952.1.2.1.0	INTEGER	239100	Voltage in the power grid [mV]

netioFrequency.0 1.3.6.1.4.1.47952.1.2.2.0	INTEGER	49900	Frequency in the power grid [mHz]
netioTotalCurrent.0 1.3.6.1.4.1.47952.1.2.3.0	INTEGER	195	[mA]
netioOverallPowerFactor.0 1.3.6.1.4.1.47952.1.2.4.0	INTEGER	534	Current power factor * 1000
netioTotalLoad.0 1.3.6.1.4.1.47952.1.2.5.0	INTEGER	24	[W]
netioTotalEnergy.0 1.3.6.1.4.1.47952.1.2.6.0	INTEGER	13	[Wh]
netioEnergyStart.0 1.3.6.1.4.1.47952.1.2.7.0	DateAndTime	2017-6-23,5:47:3.0,+0:0	Initial date and time. UTC based
netioInputID.x.0 1.3.6.1.4.1.47952.1.3.1.1.x.0	INTEGER	1	
netioInputName.x.0 1.3.6.1.4.1.47952.1.3.1.2.x.0	STRING	Input 1	Based on user defined name
netioInputState.x.0 1.3.6.1.4.1.47952.1.3.1.3.x.0	INTEGER	0	
netioInputStateString.x.0 1.3.6.1.4.1.47952.1.3.1.4.x.0	STRING	off	
netioInputS0Counter.x.0 1.3.6.1.4.1.47952.1.3.1.5.x.0	INTEGER	5	

Control (write)

x = Output number

Object OID	Type	Value	Action
netioOutputAction.x.0 1.3.6.1.4.1.47952.1.1.1.5.x.0	INTEGER (i)	0 1 2 3 4 5	Turn OFF Turn ON Short OFF delay (restart) Short ON delay Toggle (invert the state) No change


For more information about the M2M SNMP API, visit the **Support > Download** section of our website and see the following document:

[SNMP API - description of NETIO M2M API interface - PDF](#)

Note: There are differences compare to description in PDF:


- PowerDIN 4PZ can be controlled over SNMP v1/2c
- All Objects/OIDs have added “.0” at the end (the tables on this and previous page contain correct/full Objects/OIDs).

Please contact NETIO support in case of questions.

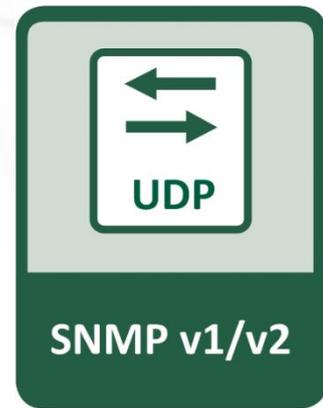

For more information and a practical demonstration of using the SNMP protocol with NETIO smart sockets, see the following Application Note:

[SNMP management of 110/230V power outlets from the command line in Windows and Linux](#)

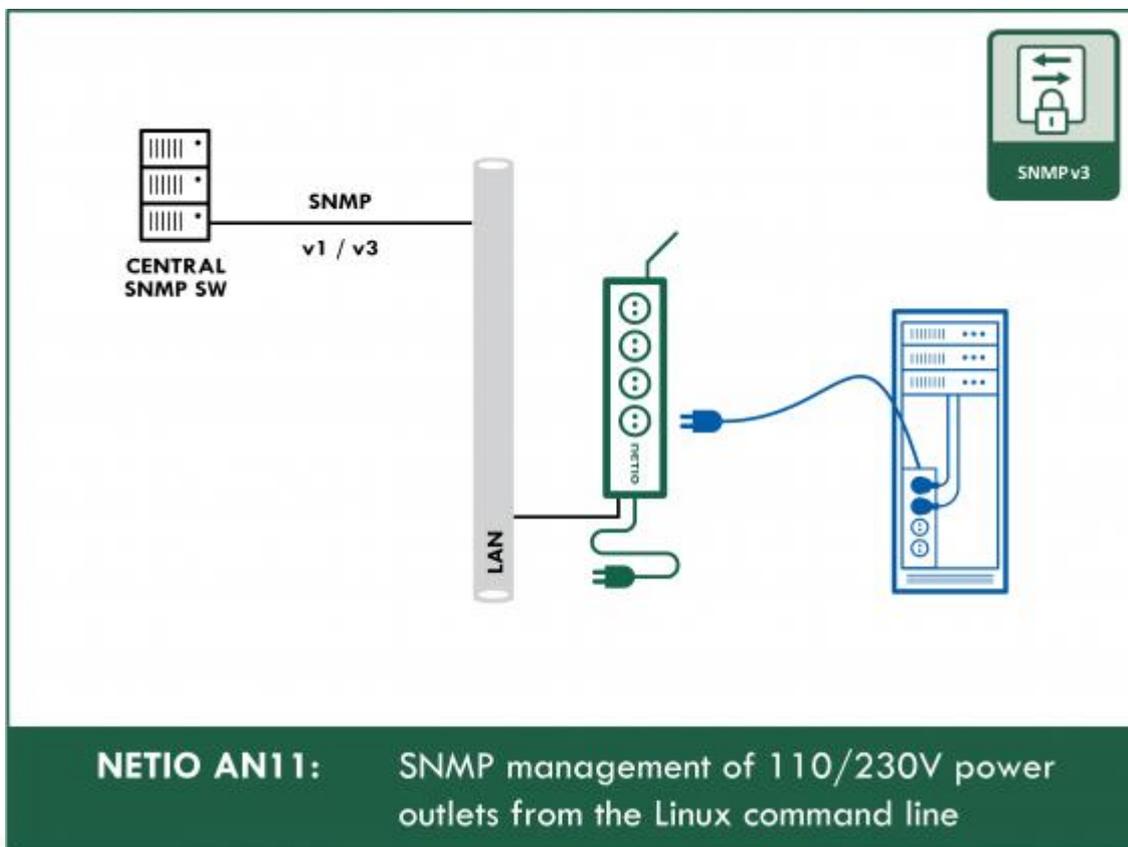

5.4 Cloud

Netio Cloud is a service provided by NETIO Products a.s. and allow easy central remote control and monitoring of the NETIO devices. What can you do in NETIO Cloud?

Output control

- On/Off switch.
- Reset button (Short Off for defined time).
- Show power consumption [kWh] per output (metered device only)

Settings

- Output name can be modified.
- Outputs can be placed to any of groups.
- Short OFF (restart) interval for reset can be set up.

NETIO Cloud is a paid service, but the current customers will gain some free credits with each device added to their NETIO Cloud account.

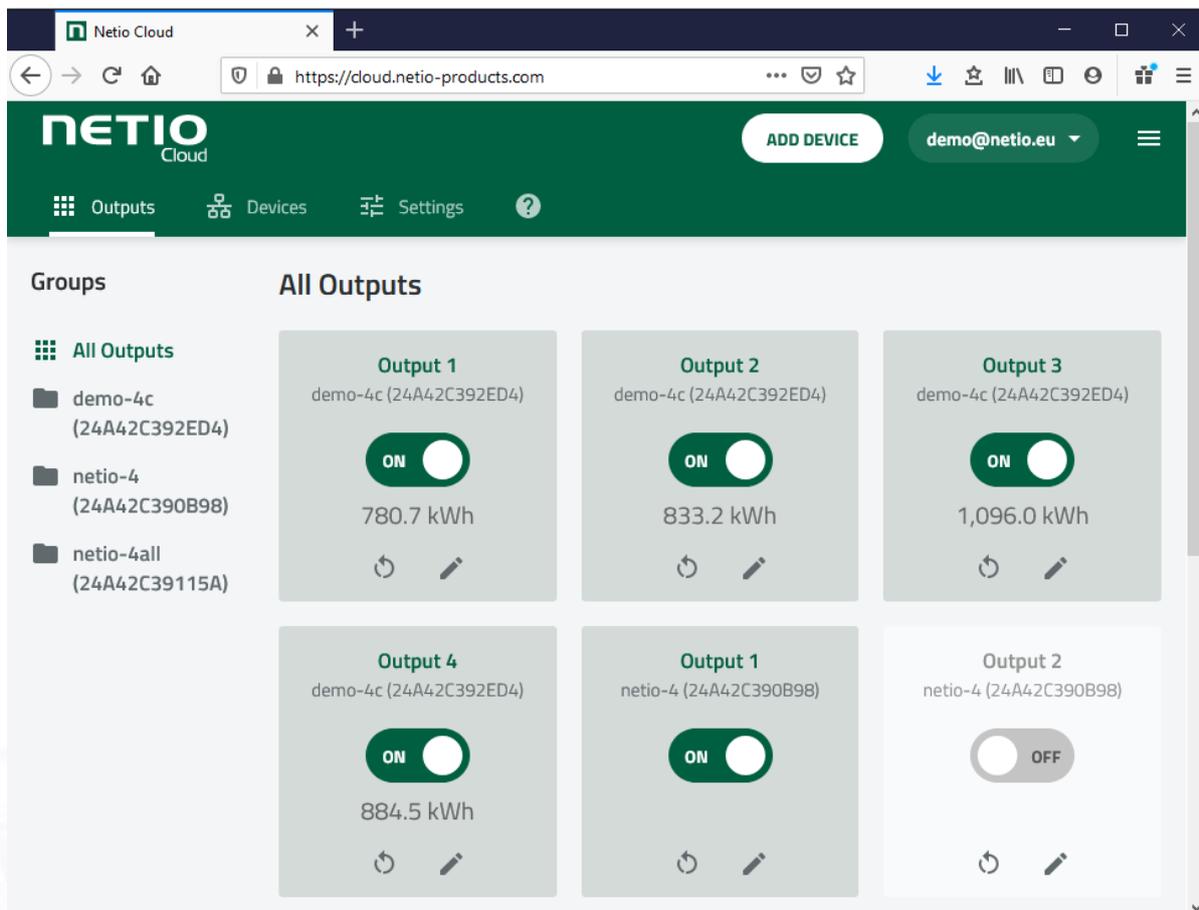


Figure 33 - NETIO Cloud

Connection to NETIO Cloud can be configured on Cloud tab.

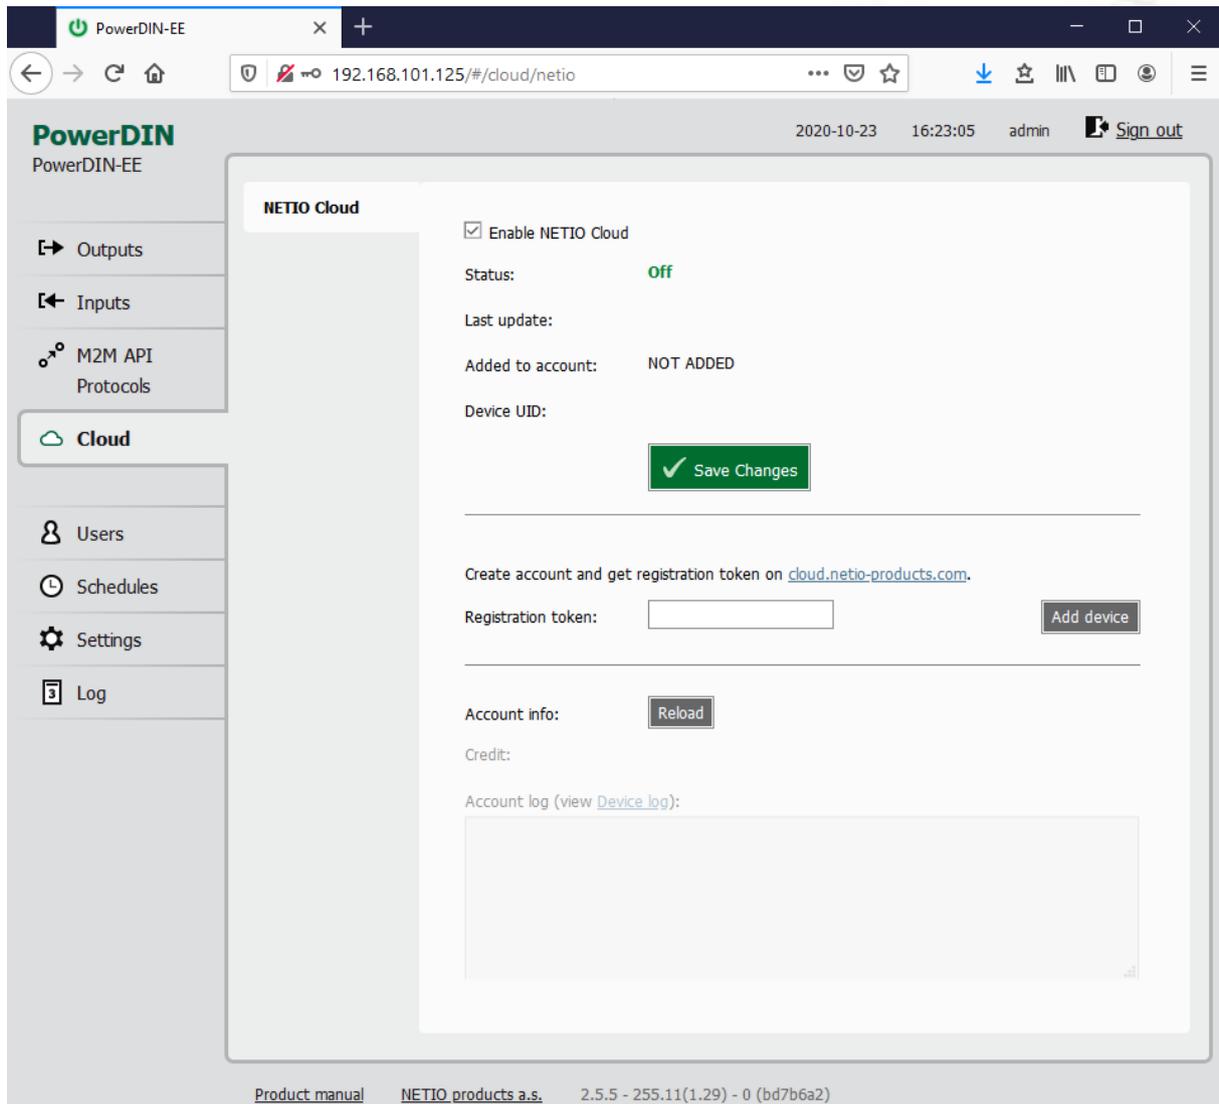


Figure 34 - Cloud configuration

Enable NETIO Cloud

Check to enable NETIO Cloud.

Status

Odd: NETIO Cloud disabled

Disconnected: Device not connected to Cloud

Cloud connect faild...reconnecting: Device it trying to connect to Cloud.

Connected: Device connected to NETIO Cloud.

Connected and synchronised: Device connected to NETIO Cloud and account information synchronized.

Last update

Date and time of the last update.

Added to account

Account name to what this device is assign.

<i>Device UID</i>	Unique device ID.
<i>Save Changes</i>	Saves the changes.
<i>Registration token</i>	Enter the registration token from NETIO Cloud web - shown when "ADD DEVICE" button used. Then press "Add device" button.
<i>Remove device</i>	If this device is connected to NETIO Cloud use this button to remove/disconnect it from NETIO Cloud.
<i>Account info</i>	Use "Reload" button tu refresh account information.
<i>Credit</i>	Value of the available credit for Cloud account.
<i>Account log</i>	Log of the Cloud account events.

5.5 Users

When several users use the NETIO device, it is advisable to assign them different accounts with the necessary privileges. In the left menu, select **Users**.

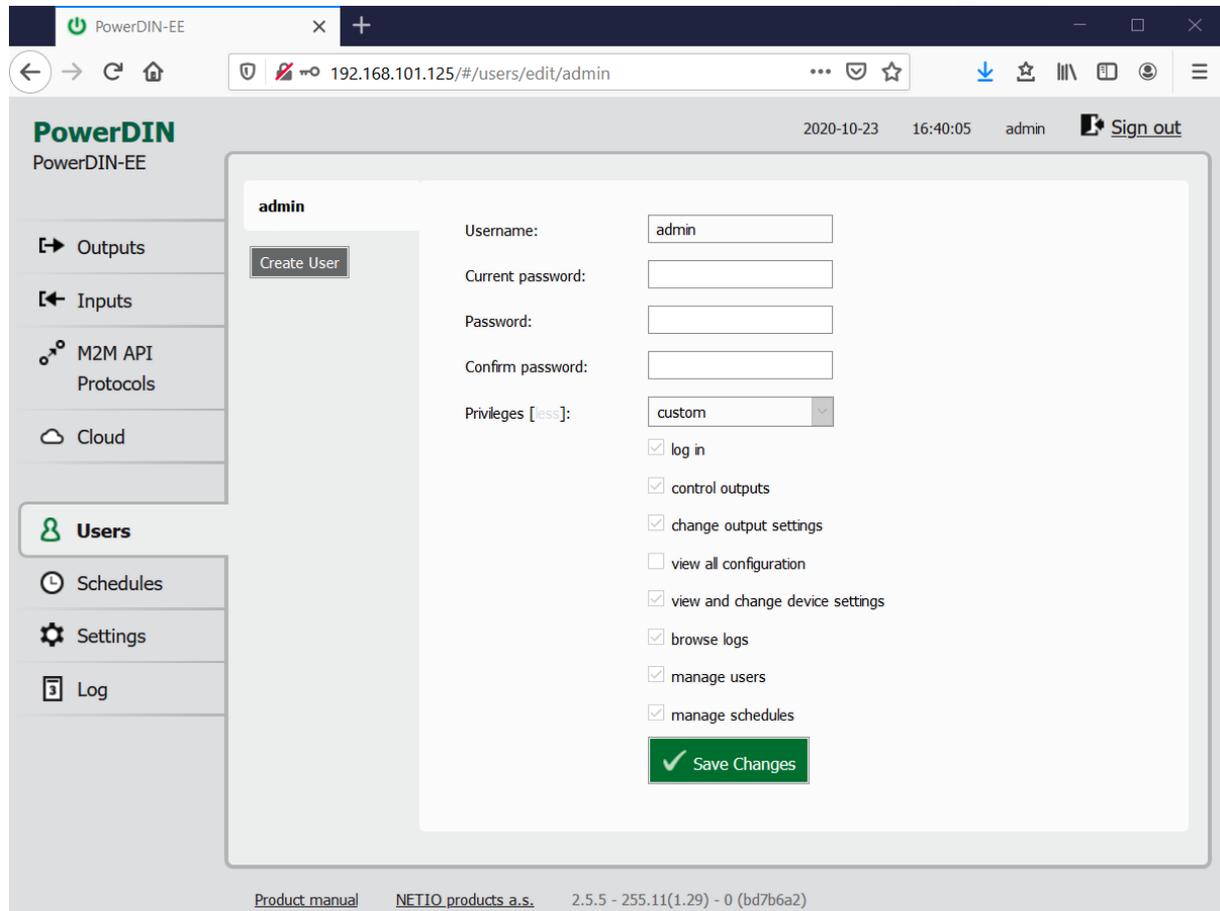


Figure 35 - Adding and managing users

Username	The username. The NETIO device must always have an “admin” account with administrator privileges; this account cannot be deleted or disabled. The device supports up to 5 user accounts. The username must start with a letter and may only contain numbers and letters without accents.
Current password	When changing the password, the current (old) password must be entered.
Password	New password for the given account. The password can be up to 15 characters long and may consist of alphanumeric characters and the following special characters: <code>_,;!*(){}[]#%@^+~-</code>
Confirm password	Enter the password again.
Privileges	administrator (full access): User with full privileges.

user (may only control outputs): User that can control the outputs but cannot change system settings.

guest (may only observe status): User that cannot change any settings, may only monitor the current output state.

Click “more/less” to display detailed privileges.

Create User	Opens a dialog to enter the parameters of a new user account.
Save changes or Create User	Saves the changes.

Only an administrator or a user with the “manage users” privilege may change the passwords of other users.

Note: User based account can be used for access to NETIO Mobile2 App.

5.6 Schedules

Schedules can specify when should an output be switched on or when is an action valid. To manage schedules, select  **Schedules** in the left menu.

By default, NETIO PowerDIN 4PZ contains one schedule: **Always**. To create a new schedule, click **Create schedule**. Specify the schedule name and set the intervals when the output should be switched on.

Note

For an output to be controlled according to the schedule, the schedule needs to be selected for that particular output at the [Schedule](#) tab in the output configuration.

PowerDIN-EE

2020-10-23 16:41:19 admin Sign out

Always ×

testS ×

Create Schedule

Name: Always

	All day	3:00	6:00	9:00	12:00	15:00	18:00	21:00
Monday	<input checked="" type="checkbox"/>	<input type="checkbox"/>						
Tuesday	<input checked="" type="checkbox"/>	<input type="checkbox"/>						
Wednesday	<input checked="" type="checkbox"/>	<input type="checkbox"/>						
Thursday	<input checked="" type="checkbox"/>	<input type="checkbox"/>						
Friday	<input checked="" type="checkbox"/>	<input type="checkbox"/>						
Saturday	<input checked="" type="checkbox"/>	<input type="checkbox"/>						
Sunday	<input checked="" type="checkbox"/>	<input type="checkbox"/>						

Save Changes

The changes of Schedule apply after the next planned change or when Schedule will be enabled for a specific output.

Product manual NETIO products a.s. 2.5.5 - 255.11(1.29) - 0 (bd7b6a2)

Figure 36. Adding a custom schedule

A new interval can be quickly created by marking the corresponding slots by clicking and dragging with the **left** mouse button. An existing interval can be shortened or extended by dragging either end of the interval. To delete an interval, click it with the **right** mouse button. To create an interval encompassing an entire day, click the box next to that day in the **All day** column. By clicking and dragging, intervals (including all-day ones) can be created for several days at the same time.

In this quick way, intervals can be created with a granularity of 10 minutes. To specify the times for an existing interval more precisely, click it with the left mouse button to open the start and end time settings. There it is possible to specify the time up to the second. To save the new values, click **OK**. To create a new interval by entering the precise times, click an empty space within the respective day with the **left** mouse button.

The screenshot shows the PowerDIN-EE web interface. The browser address bar displays the URL `192.168.101.125/#/schedules/create`. The page title is "PowerDIN-EE" and the user is logged in as "admin". The interface includes a sidebar with navigation options: Outputs, Inputs, M2M API Protocols, Cloud, Users, Schedules (selected), Settings, and Log. The main content area shows a "Create Schedule" form with a "Name:" field and a calendar grid. The calendar grid has columns for "All day", "3:00", "6:00", "9:00", "12:00", "15:00", "18:00", and "21:00". A modal dialog box titled "Add interval" is open, with "From:" set to "03:30" and "To:" set to "03:40". The dialog box has "OK" and "Cancel" buttons.

Figure 37. Adding an interval with a precision to the second



Deleting a schedule

By deleting a schedule, all Schedulers for specific outputs with this schedule are automatically disabled. The states of the respective outputs are unchanged; however, from that moment on, the outputs are under manual control.

5.7 Settings

NETIO PowerDIN 4PZ can use the Ethernet connection (RJ45) or WiFi connection to network. When the Ethernet cable is connected the WiFi is completely turned off. When the Ethernet cable is disconnected then the WiFi turns automatically on. So Wi-Fi can be the main or only backup connection or not used.

To ensure correct operation as intended, the device settings need to be properly configured. Select  **Settings** in the left menu to display a sub-menu with product settings.

For the Ethernet settings see chapter “Network Configuration / Ethernet”

5.7.1 Wi-Fi

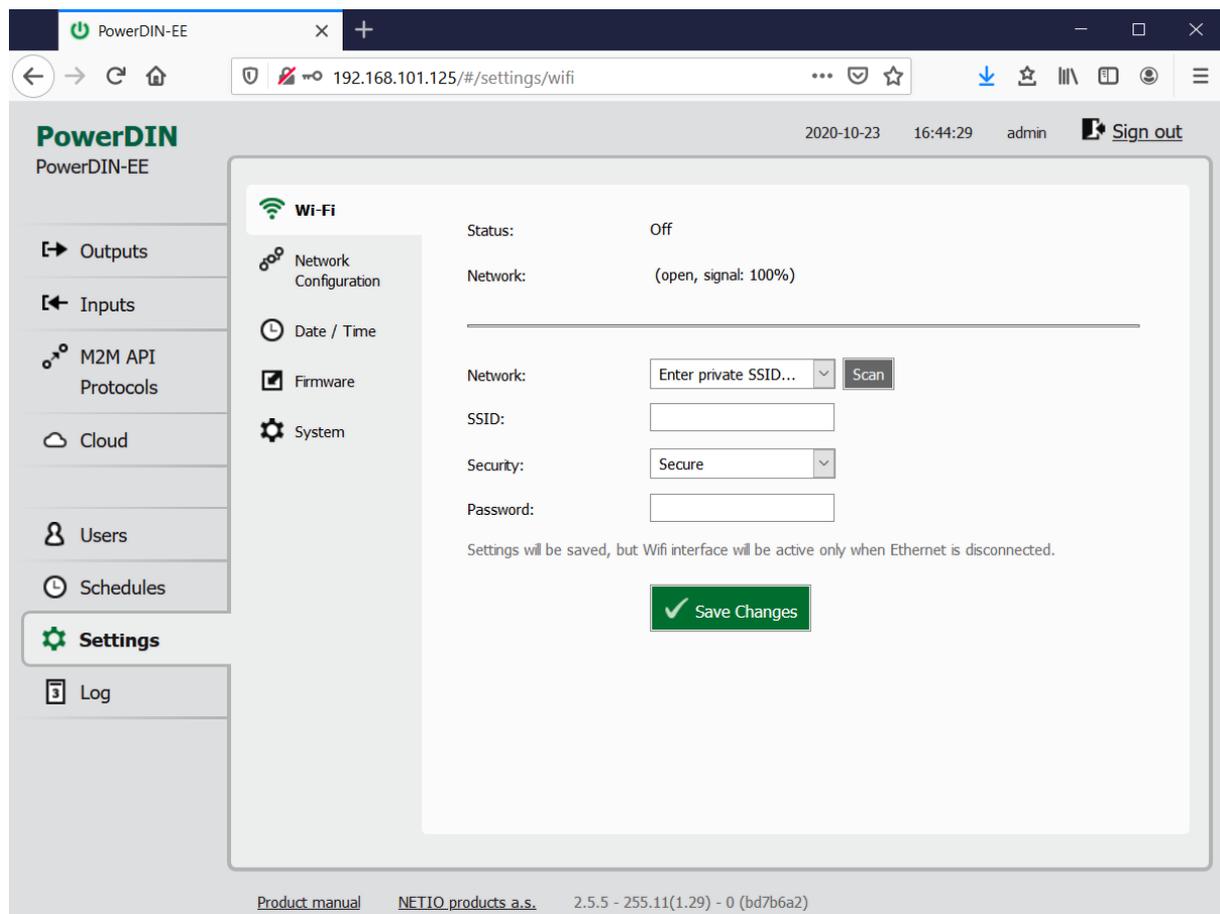


Figure 38 - Wi-Fi settings

Status	Indicates whether the device is connected to (“Connected”) or disconnected from (“Disconnected”) the local network.
Network	Name of the Wi-Fi network to which the device is connected. In parentheses, there is an indication of whether or not the communication is encrypted (“secure”) and of signal strength.
Network [Scan]	From the menu, select a network to connect to. Press Scan to have PowerDIN 4PZ search for Wi-Fi networks in range.

SSID	Enter SSID if selected “Enter private SSID” in Network.
Security	Chose Secure/Open if selected “Enter private SSID” in Network.
Password	Password for connecting to the Wi-Fi network.
Save Changes	Saves the changes. Note: Settings will be saved, but Wifi interface will be active only when Ethernet is disconnected.

5.7.2 Network Configuration

This section allows configuring the IP parameters of the PowerDIN 4PZ network interface, which are essential for correct network operation. One of the options Wi-Fi / Ethernet or both can be configured depending on chosen connectivity.

Wi-Fi

The screenshot displays the PowerDIN-EE web interface for network configuration. The browser address bar shows the URL `192.168.101.125/#/settings/network/wifi`. The interface includes a sidebar with navigation options: Outputs, Inputs, M2M API Protocols, Cloud, Users, Schedules, Settings (selected), and Log. The main content area is titled "Network Configuration" and shows the Wi-Fi settings. The MAC address is `24:A4:2C:38:E9:EB` and the status is "Off". There are two radio button options: "Use DHCP" (selected) and "Set static IP address". The static IP fields are: IP address: `0.0.0.0`, Net mask: `255.255.255.0`, Default gateway: `0.0.0.0`, and DNS server: `192.168.1.1`. The hostname is `PowerDIN-EE`. A note states: "Settings will be saved, but Wifi interface will be active only when Ethernet is disconnected." A green "Save Changes" button is present. At the bottom, a warning message reads: "Warning: Changes to network settings may result in device becoming unavailable at the current address. See the device User Manual for ways to find the device at its new address." The footer contains links for "Product manual", "NETIO_products.a.s.", and version information "2.5.5 - 255.11(1.29) - 0 (bd7b6a2)".

Figure 39 - Network configuration - Wi-Fi

MAC address	Ethernet address of the Wi-Fi network adapter. Unique for each device.
Status	Connection status

Use DHCP

When selected, the device attempts to obtain network configuration from a DHCP server. If your network does not use DHCP, set the parameters statically.

Set static IP address	Manual configuration of network parameters. Select this option if your network does not have a DHCP server.
IP address	Choose an unused IP address in your network's address range.
Net mask	Set the network mask according to your network's address range.
Default gateway	Address of the network gateway. Corresponds to the address of your router's LAN interface.
DNS server	IP address of the domain name server. It is usually the same as the gateway address, as long as the DNS function is enabled on the router. If unsure, enter a public DNS server, such as: 8.8.8.8
Hostname	Name of the device in the local network. It is generated from the Device name (unsupported characters are replaced).
Save Changes	Saves the changes.

**Caution**

After changing the network configuration, it may be necessary to re-discover the NETIO device at its new address. The discovery procedure is described in section [Detecting and configuring the IP address](#) .

Ethernet

The screenshot shows the PowerDIN-EE web interface. The browser address bar displays the URL `192.168.101.125/#/settings/network/ethernet`. The page title is "PowerDIN-EE" and the user is logged in as "admin". The interface includes a sidebar with navigation options: Outputs, Inputs, M2M API Protocols, Cloud, Users, Schedules, Settings (selected), and Log. The main content area is titled "Network Configuration" and shows the "Ethernet" tab selected. The configuration details are as follows:

- MAC address: 24:A4:2C:38:E9:EE
- Status: Connected
- Use DHCP: (selected)
- Set static IP address: (not selected)
- IP address:
- Net mask:
- Default gateway:
- DNS server:
- Hostname: PowerDIN-EE

A green "Save Changes" button is located at the bottom of the configuration area. Below the button, a warning message states: "Warning: Changes to network settings may result in device becoming unavailable at the current address. See the device User Manual for ways to find the device at its new address." The footer of the page includes links for "Product manual" and "NETIO products a.s.", along with version information: "2.5.5 - 255.11(1.29) - 0 (bd7b6a2)".

Figure 40 - Network configuration - Ethernet

MAC address	Ethernet address of the Ethernet network adapter. Unique for each device. Also] corresponds to the NETIO device serial number.
Status	Connection status
Use DHCP	When selected, the device attempts to obtain network configuration from a DHCP server. If your network does not use DHCP, set the parameters statically.
Set static IP address	Manual configuration of network parameters. Select this option if your network does not have a DHCP server.
IP address	Choose an unused IP address in your network's address range.
Net mask	Set the network mask according to your network's address range.
Default gateway	Address of the network gateway. Corresponds to the address of your router's LAN interface.
DNS server	IP address of the domain name server. It is usually the same as the gateway address, as long as the DNS function is enabled on the router. If unsure, enter a public DNS server, such as: 8.8.8.8

Hostname Name of the device in the local network. It is generated from the Device name (unsupported characters are replaced).

Save Changes Saves the changes.



Caution

After changing the network configuration, it may be necessary to re-discover the NETIO device at its new address. The discovery procedure is described in section [Detecting and configuring the IP address](#) .

5.7.3 Date / Time

In the Settings menu on the left, select  **Date/Time**.

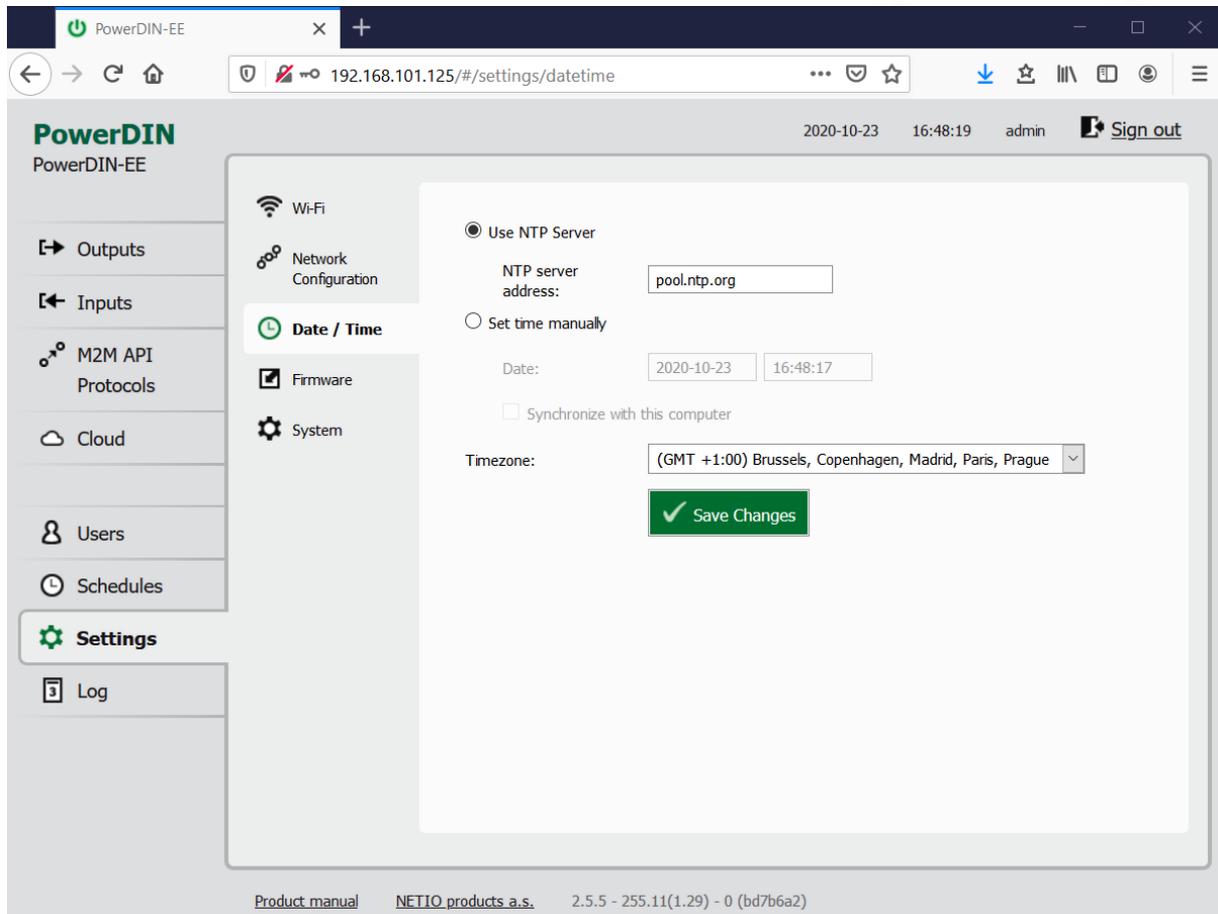


Figure 41 - Date / time settings

Use NTP server

When selected, the device's clock is periodically synchronized with a NTP server. If you do not have your own NTP server in your network, use e.g. tik.cesnet.cz

Set time manually

Select if you do not wish to use a NTP server.

Date

Current date and time on the NETIO device's clock. Can be modified if necessary.

Synchronize with this computer

Check this box to copy the current date and time from your computer to NETIO device's internal clock.

Timezone

Set the time zone to govern the time settings.

Save Changes

Saves the changes.

5.7.4 Firmware

The **Firmware** section allows updating the firmware of your device. The current firmware version is shown in the footer of each page.

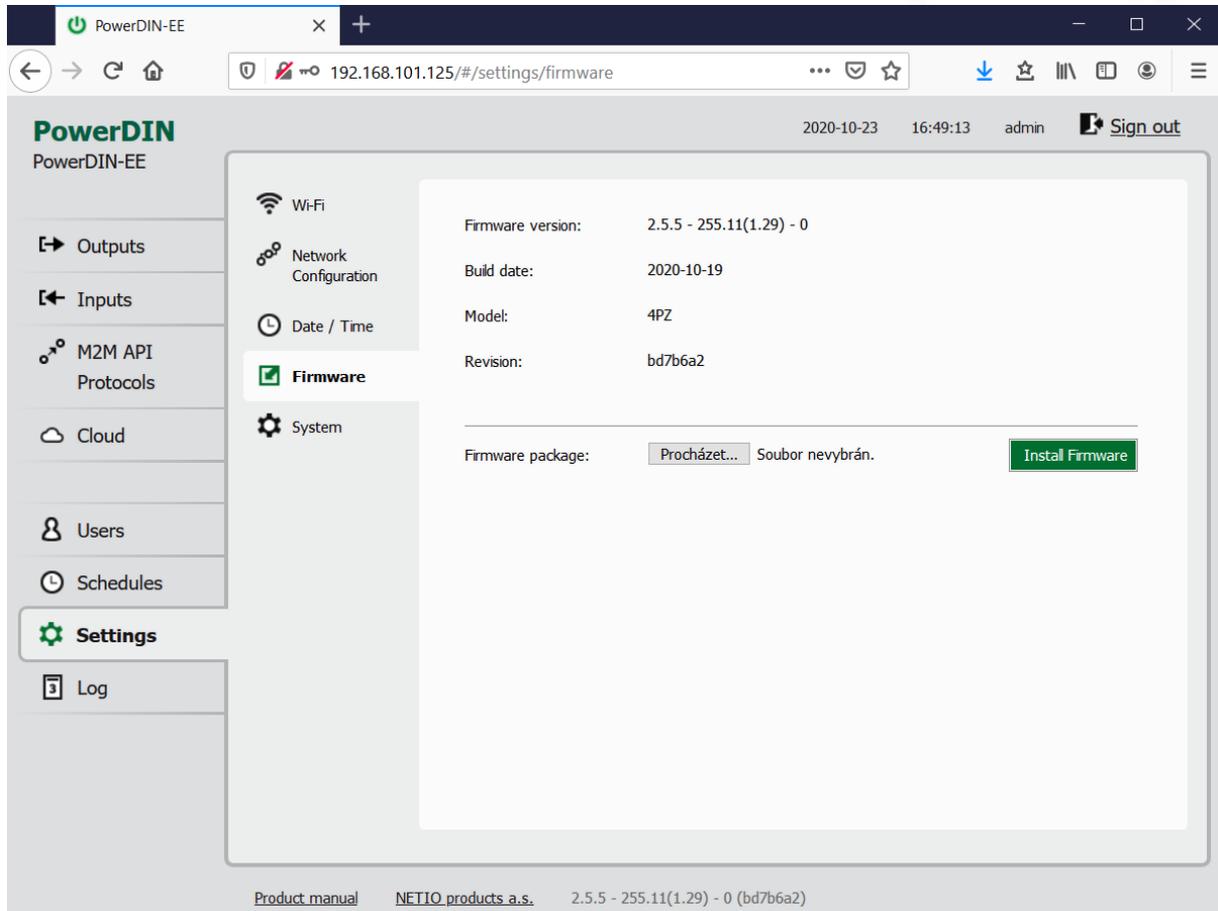


Figure 42 - Details about the installed firmware

Firmware version	Installed firmware version.
Build date	Creation date of the installed firmware version.
Model	Model designation.
Revision	Revision number.
Firmware Package	Click Browse to select a firmware file to install. Then click Install Firmware to start the installation.

Firmware files are available at: <https://www.netio-products.com/en/powerdin-4pz-firmware>

Where to find the right fw?

Go to the product page on our website (link below), select your product and scrool down the page.

<https://www.netio-products.com/en/products/all-products>

The screenshot shows the product page for the NETIO PowerDIN 4PZ. The page includes a navigation menu with links for General properties, Technical specifications, FAQ, Download, Photo and video, Product comparison, and Available models. The main content area is divided into three sections: Flyer, Manual, and Quick Installation Guide. Each section has download buttons for English (EN), Czech (CS), and German (DE). Below these sections, there are links for Software (UDP-Discover v1.0.10 - Windows - EXE and Firmware PowerDIN 4PZ firmware) and Applications for mobile (Android).

Figure 43 - WEB of NETIO products - Link to Firmware download

The screenshot shows the firmware download page for the NETIO PowerDIN 4PZ. The page title is "PowerDIN 4PZ firmware". The main heading is "PowerDIN 4PZ firmware". Below the heading, the firmware version is listed as "Firmware PowerDIN 4PZ: 2.5.4 (2,99 MB)" with a date of "2020/09/02". There are release notes and a link to download the firmware. The page also includes a search bar and navigation links for PRODUCTS, USE CASES, SUPPORT, COMPANY, WHERE TO BUY, and CONTACT.

Figure 44 - Firmware download link at the netio-products.com website

**Caution**

Before installing firmware, read carefully the instructions at our website, make sure that you are upgrading from the correct version, and follow the prescribed procedure.

Downgrade to a lower firmware version may cause the device to reset to factory defaults. This will disconnect the device from your Wi-Fi network. For this reason, we strongly discourage from downgrading the firmware remotely, without physical access to the device. Before downgrading the firmware, always consider if it is really necessary and if needed, contact technical support: support@netio.eu

5.7.5 System

This section allows performing basic settings and viewing basic parameters of the device.

The screenshot shows the 'System' settings page in the PowerDIN-EE web interface. The browser address bar shows the URL '192.168.101.125/#/settings/system'. The page header includes the device name 'PowerDIN-EE', the date '2020-10-23', the time '16:49:51', the user 'admin', and a 'Sign out' button. The left sidebar contains navigation options: Outputs, Inputs, M2M API Protocols, Cloud, Users, Schedules, Settings (selected), and Log. The main content area shows the following settings:

- Uptime:** 2 hours 22 minutes 33 sec
- Firmware version:** 2.5.5 - 255.11(1.29) - 0 [Upgrade](#)
- Device name:** PowerDIN-EE ✓
- HTTP port:** 80 ✓
- Enable Periodic device restart**
- Restart period:** 1440 minutes, does not affect the Output state
- Debug Log:**
- Save Changes** (button)
- Locate:** Blink with status LEDs for 1 minute. (button)
- Reset Power Consumption Counters** (button)
- Restore Factory Defaults** (button)
- Export and import device configuration**
- Configuration file:** Procházet... Soubor nevybrán. [Export configuration](#) [Import configuration](#)

The footer of the page contains the following text: [Product manual](#) [NETIO products a.s.](#) 2.5.5 - 255.11(1.29) - 0 (bd7b6a2)

Figure 45 - System settings


Uptime	Time since the last restart of the device.
Firmware version	Currently installed firmware version and a link to the Firmware tab.
Device name	Shown in NETIO Discover and under the device logo in the web administration (in the figure above: <i>PowerDIN-EE</i> under the PowerDIN logo in the top left corner).

The device “Hostname” is generated from this Device name (unsupported characters are replaced).

HTTP port	Current http port for webadministration and http based M2M API protocols (XML, JSON, URL API). If the port number is different from 80, it has to be specified in the web browser after the NETIO device IP address, e.g.: 192.168.0.99:888
Enable Periodic device restart	Enables automatic restarting of the device.
Restart period	Specifies the interval for automatic device restarts. The restart does not affect the state of the output.
Debug Log	Adds a DebugLog section with diagnostic values to XML and JSON M2M API.
Save Changes	Saves the changes.
Locate	Identifies a particular device. When clicked, the yellow LED no. 1 starts flashing with pauses.
Reset Power Consumption Counter	Resets the electricity consumption counters.
Factory Reset Defaults	Resets NETIO device to factory defaults. Follow section 3.1 to make the device operational again.
Export and import device configuration	<p>Can be used to back-up and restore device configuration. Do not modify the exported file!</p> <p>“Export configuration” - shows a confirmation dialog for exporting the device configuration and downloading it to your computer.</p> <p>“Browse” - opens a dialog to select a configuration file for import into the device.</p> <p>“Import configuration” - shows a confirmation dialog for importing the device configuration. After the import, the device restarts and the imported configuration takes effect.</p>

5.8 Log

In the left menu, select  **Log**.

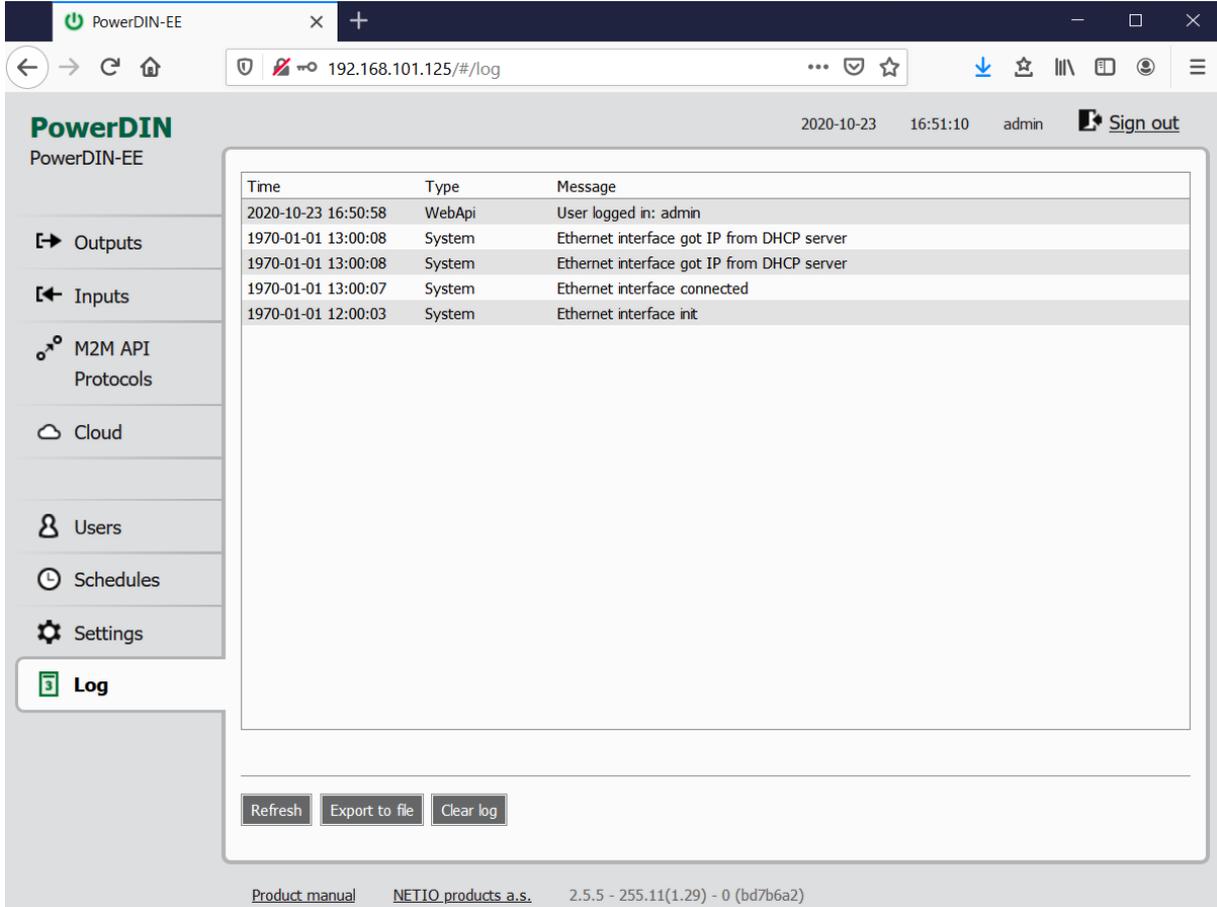

PowerDIN-EE

2020-10-23 16:51:10 admin [Sign out](#)

Time	Type	Message
2020-10-23 16:50:58	WebApi	User logged in: admin
1970-01-01 13:00:08	System	Ethernet interface got IP from DHCP server
1970-01-01 13:00:08	System	Ethernet interface got IP from DHCP server
1970-01-01 13:00:07	System	Ethernet interface connected
1970-01-01 12:00:03	System	Ethernet interface int

Refresh Export to file Clear log

[Product manual](#) [NETIO products a.s.](#) 2.5.5 - 255.11(1.29) - 0 (bd7b6a2)

Figure 46 - Event log

Refresh Reloads the log to show the most recent entries.

Export to file Exports the log in the html format.

Clear log Clears the log records.

The log contains 40 most recent events only and is cleared when the device is restarted.

Sources (types) of log entries:

System	Event generated by the system itself, e.g. WiFi reconnect
WebApi	Event related to a request from the web interface, e.g. User logged in
XML	M2M XML protocol
JSON	M2M JSON protocol
M2M URL	M2M URL API protocol
Modbus	M2M Modbus/TCP protocol
MQTT	M2M MQTT protocol
SNMP	M2M SNMP protocol
Web server	Web server, e.g. Client disconnected
Cloud	NETIO Cloud

6 DECLARATION OF CONFORMITY (RED CE)

Manufacturer: NETIO products a.s.
U Pily 3/103
Address: 143 00 Praha 4, Czech Republic
Product: PowerDIN 4PZ

This declaration of conformity is issued under the sole responsibility of the manufacturer.

Object of the declaration: "NETIO PowerDIN 4PZ controlled and monitored over the WiFi / LAN network".

RED:

The product mentioned above to which this declaration relates is in conformity with the essential requirements and other relevant requirements of the Radio Equipment Directive (2014/53/EU).

The product mentioned above is in conformity with the following standards and/or other normative documents:

**EN 55032, EN 55024, EN 61000-3-2, EN 61000-3-3, ETSI EN 301489-1,
ETSI EN 301489-17**

LVD:

The product mentioned above to which this declaration relates is in conformity with the essential requirements and other relevant requirements of the Directive 2014/35/EU.

The product mentioned above is in conformity with the following standards and/or other normative documents:

EN/IEC 60950-1 and EN/IEC 62368-1:2014

RoHS:

The product mentioned above to which this declaration relates is in conformity with the essential requirements and other relevant requirements of the Directive 2011/65/EU (restriction of the use of certain hazardous substances in electrical and electronic equipment).

The product mentioned above is in conformity with the following standards and/or other normative documents:

EN 50581: 2012

Czech Republic, Prague, July, 22, 2020

Jan Řehák, Chief of the board



7 NETIO products overview

	LAN (RJ45)	WiFi / Antenna	IQRF 868MHz	Output Type	Switched outputs	Metered outputs	DI Inputs	Power	Button(s) / LED	NFC	Industrial features	Power-Up state
PowerPDU 4C	2x	-	-	C13	4	4	-	110/230V / 10A	4 / 4	-	ZCS, RS232	Yes
PowerPDU 4PS	1	-	-	C13	4	-	-	110/230V / 10A	1 / 4	-	ZVS	Yes
PowerPDU 8QS	1	-	-	C13	8	1 + all	1x	110/230V / 16A	1 / 2	-	ZVS	Yes
PowerDIN 4PZ	1	Int.	-	Terminal block	4	2	2x (S0)	110/230V / 16A	1 / 4	Yes	ZCS	Yes
PowerBOX 3PE	1	-	-	FR	3	-	-	230V / 16A	1 / 0	-	ZVS	Yes
PowerBOX 3PF	1	-	-	DE	3	-	-	230V / 16A	1 / 0	-	ZVS	Yes
PowerBOX 3PG	1	-	-	UK	3	-	-	230V / 16A	1 / 0	-	ZVS	Yes
PowerBOX 4KE	1	-	-	FR	4	4	-	230V / 16A	1 / 2	-	ZCS	Yes
PowerBOX 4KF	1	-	-	DE	4	4	-	230V / 16A	1 / 2	-	ZCS	Yes
PowerBOX 4KG	1	-	-	UK	4	4	-	230V / 16A	1 / 2	-	ZCS	Yes
PowerCable REST 101E	-	Int.	-	FR	1	1	-	230V / 16A	1 / 1	Yes	ZCS	Yes
PowerCable REST 101F	-	Int.	-	DE	1	1	-	230V / 16A	1 / 1	Yes	ZCS	Yes
PowerCable REST 101J	-	Int.	-	CH	1	1	-	230V / 10A	1 / 1	Yes	ZCS	Yes
PowerCable REST 101G	-	Int.	-	UK	1	1	-	230V / 13A	1 / 1	Yes	ZCS	Yes
PowerCable REST 101S	-	Int.	-	C13	1	1	-	110/230V / 10A	1 / 1	Yes	ZCS	Yes
PowerCable REST 101Y	-	Int.	-	EU->C13	1	1	-	110/230V / 10A	1 / 1	Yes	ZCS	Yes
PowerCable IQRF 901E	-	-	Yes	FR	1	1	-	230V / 16A	1 / 1	-	ZCS	-
PowerCable IQRF 901F	-	-	Yes	DE	1	1	-	230V / 16A	1 / 1	-	ZCS	-

NETIO products - features

	Web	HTTPS	Scheduler function	IP Watadog function	Lua scripting	Telnet	Modbus/TCP	XML	JSON	URL-API	SNMP	Http(s) push XML / JSON	MQTT	MQTT-flex
PowerPDU 4C	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	Yes	v1/v3	-	Yes	-
PowerPDU 4PS	Yes	-	Yes	-	-	Yes	Yes	Yes	Yes	Yes	v1/v3	Yes	-	Yes
PowerPDU 8QS	Yes	-	Yes	-	-	Yes	Yes	Yes	Yes	Yes	v1/v3	Yes	-	Yes
PowerDIN 4PZ	Yes	-	Yes	-	-	Yes	Yes	Yes	Yes	Yes	v1/v3	Yes	-	Yes
PowerBox 3Px (E,F,G)	Yes	-	Yes	-	-	Yes	Yes	Yes	Yes	Yes	v1/v3	Yes	-	Yes
PowerBox 4Kx (E,F,G)	Yes	-	Yes	-	-	Yes	Yes	Yes	Yes	Yes	v1/v3	Yes	-	Yes
PowerCable REST 101x	Yes	-	Yes	-	-	Yes	Yes	Yes	Yes	Yes	v1/v3	Yes	-	Yes
PowerCable IQRF 901x	-	-	-	-	-	-	-	-	-	-	-	-	-	-